


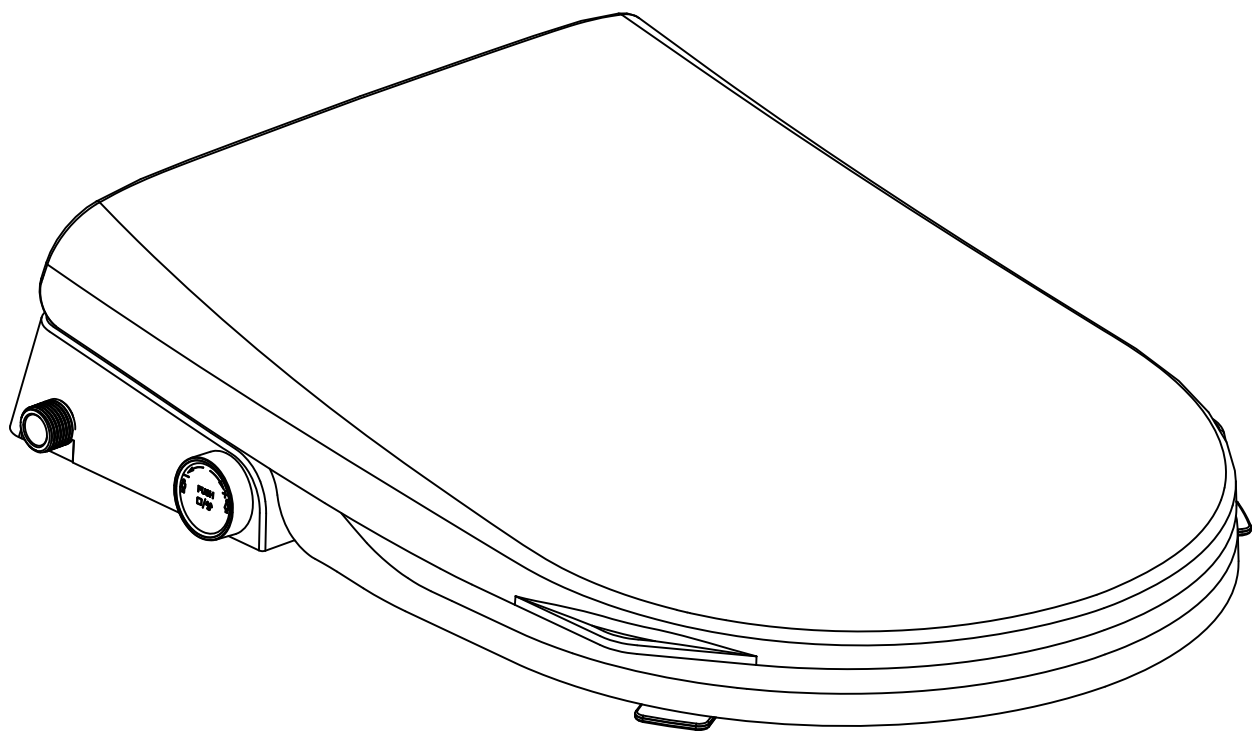

Installation and Operating Instructions

Suitable for the E553-01xx series

Safety precautions

Explanation of symbols



Refers to potentially dangerous situation that may cause serious injury or death .



Refers to potentially dangerous situation that may cause injury or property losses .



Refers to forbidden to do .



MUST BE ABIDED

Refers to abide by the rules .



The supplier shall not be liable for any loss arising from the failure to comply with the following regulations

 
- 1.This equipment is “I” type electric appliance, must be completed connected to the grounding system
- 2.This equipment is electric appliance, please do not be installed at the place where can easily be splashed with water or high temperature. Please install exhaust fan or ventilation opening to make sure there is a good ventilation when using at Bathroom.
- 3.If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 4.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Please use the low flow and temperature .
- 5.Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 6.The appliance will be permanently connected to the water pipe. Remove the water pipe assembly except for installation and maintenance.
- 7.The Portable Residual Current Device (PRCD) is optional. The PRCD must be reliably fixed.

Safety precautions



FORBID

1. Do not insert or remove power plug with wet hands .
Otherwise there is a risk of electric shock .
2. Do not damage the power cord and plug.
Otherwise there is a risk of electric shock, short- circuit and fire.
3. Do not use the loose socket.
Otherwise there is a risk of electric shock and fire.
4. The power supply must be accorded with regulation.
Otherwise there is a risk of damage the product and fire.
5. Do not disassemble , repair or reassemble the product.
Otherwise there is a risk of electric shock and fire.
6. Do not place a stove or a cigarette near the product.
Otherwise there is a risk of fire.
7. Make sure not to splash water ,detergents or urine on the product
and the power plug.
Otherwise there is a risk of electric shock,damage the product and
fire
8. Do not turn the product upside-down.
Otherwise this might cause product damage.
9. Do not bend or distort the inlet hose.
Otherwise there is a risk of water leakage.
- 10.The new hose-sets supplied with the appliance are to be used
and the old hose-sets should not be reused.















NOTICE

Before installation please reset the thermostat as per
"Resetting Thermostat"of instructions.
Otherwise the washing water may not heat up.

Please send email to "oceanwell@vip.sina.com" for the installation
and operating instructions.

 Bill of material

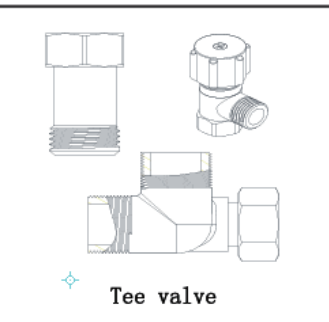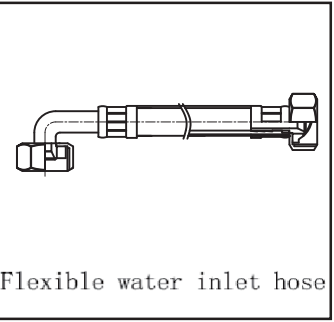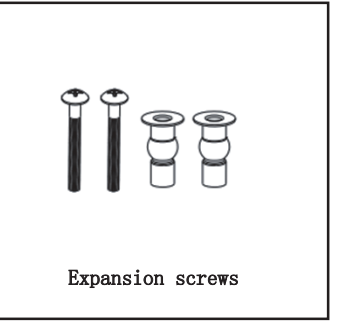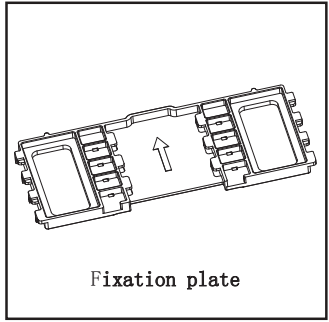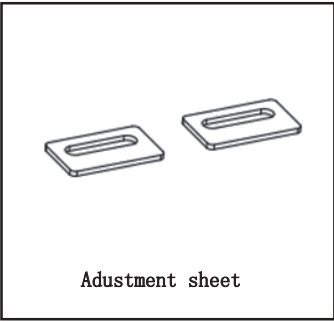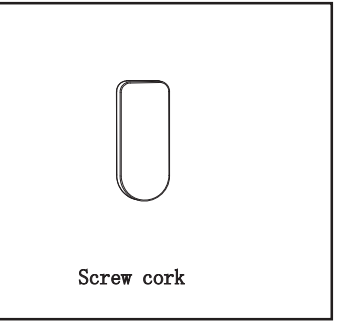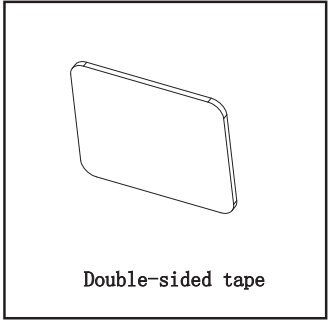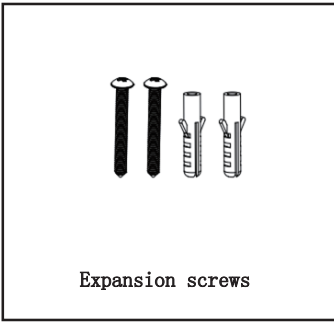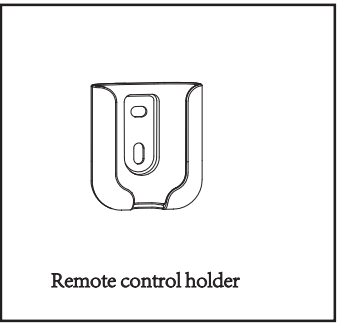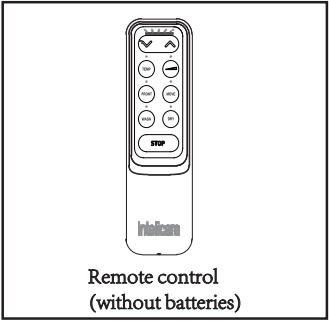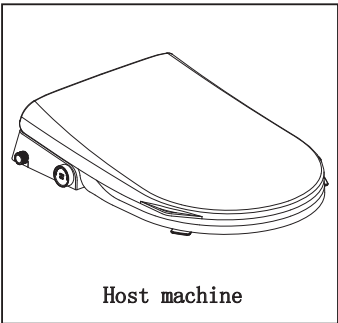




Filter




Flushing baffle

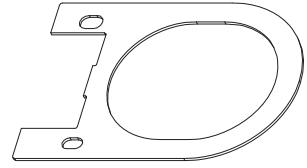

Install template

 Tools in need



Cross screwdriver



Seated Block

Technical Secification

MODEL				E553-0111	E553-0121
Wash	Rear Wash	●			
	Female Wash	●			
	Oscillating Spray	●			
	Pulsating Spray	●			
	Oscillating and Pulsting Spray	●			
	Adjustable Water Temperature	6 Steps (Default 4th)			
	temperature modes	Constant temperature(Default) and Gradual cooling			
	Adjustable Water Flow Rate	5 Steps (Default 3rd)			
	Adjustable Spray Position	5 Steps (Default 3rd)			
Warm Air	Air Drying	●			
	Adjustable Dryer Temperature	6 Steps (Default 3rd)			
	Adjustable Air Flow Rate	5 Steps (Default 3rd)			
Hygiene	Nozzle Self Cleaning	●			
	Nozzle Manually Cleaning	●			
	Night Light	●			
	Soft Closing Seat And Cover	●			
	Quick Release Seat And Cover	●			
	Body Knob	●			
	Romote Control	●			
	Descaling	●			
	Water Supply Connector	G 1/2	G 3/8	G 1/2	G 3/8
	Water Supply Direction	Right side	Bottom side	Right side	Bottom side
	Water Supply Pressure	0.5(dynamic pressure)~10(static pressure)Bar			
	Water Supply Temperature	4~30℃			
	Rated Voltage	AC230V, 50HZ			
	Power	1500W			
	Length Of Power Cord	about 1.5m			
	Ambient Temperature	4~40℃			
	Protection Degree	IPX4			
Wash Device	Flow Rate	600~1000mL/min			
	Water Temperature	31~39℃			
	Wash Cycle Time	3 Minutes at Constant temperature mode and 1 minute at Gradual cooling mode			
	Heating Mode	Tank			
	Maximum Heater Power	2100W			
	Safety Device	Thermal Cutoff Fuses\Liquid Level Switch\Thermostat			
	Backflow Prevention	Air Gap			
Dry Device	Minmum Air Volume	0.2m³/min			
	Maximum Dryer Power	380W			
	Warm Air Temperature	35~50℃			
	Dry Cycle Time	3 Minutes			
	Safety Device	Thermal Cutoff Fuses\Thermostat			
Remote Control	Frequency Range	2460MHz			
	Maximum RF Output Power	-10dBm			
	Type of Batteries	1.5V LR03 AAA			
	Quantity of Batteries	Two pieces			
	Net Weight	3Kg		7Kg	
	Dimension	172*384*110 mm		520*384*119 mm	





NOTICE

Technical upgrade will be edited into the new version instruction without additional notice.


Please follow the real if it is different from the nominal in shape ,color and accessories.

The pictures of instruction is for reference only. Please subject to the actual product .






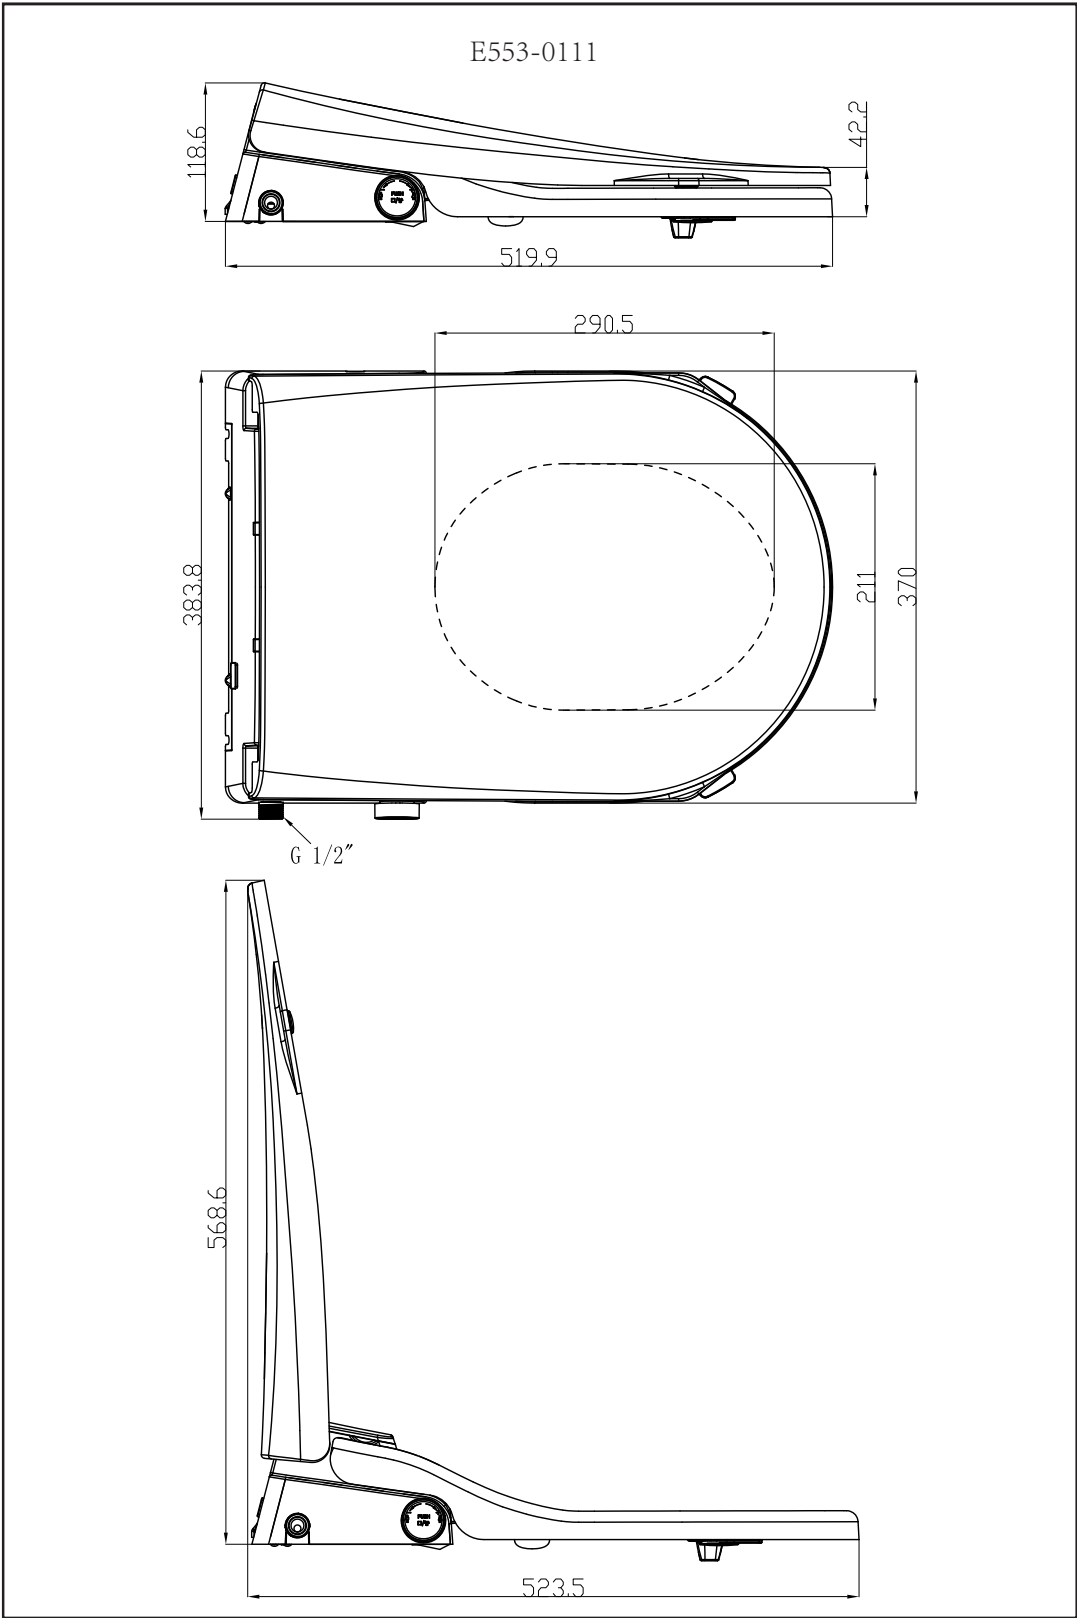







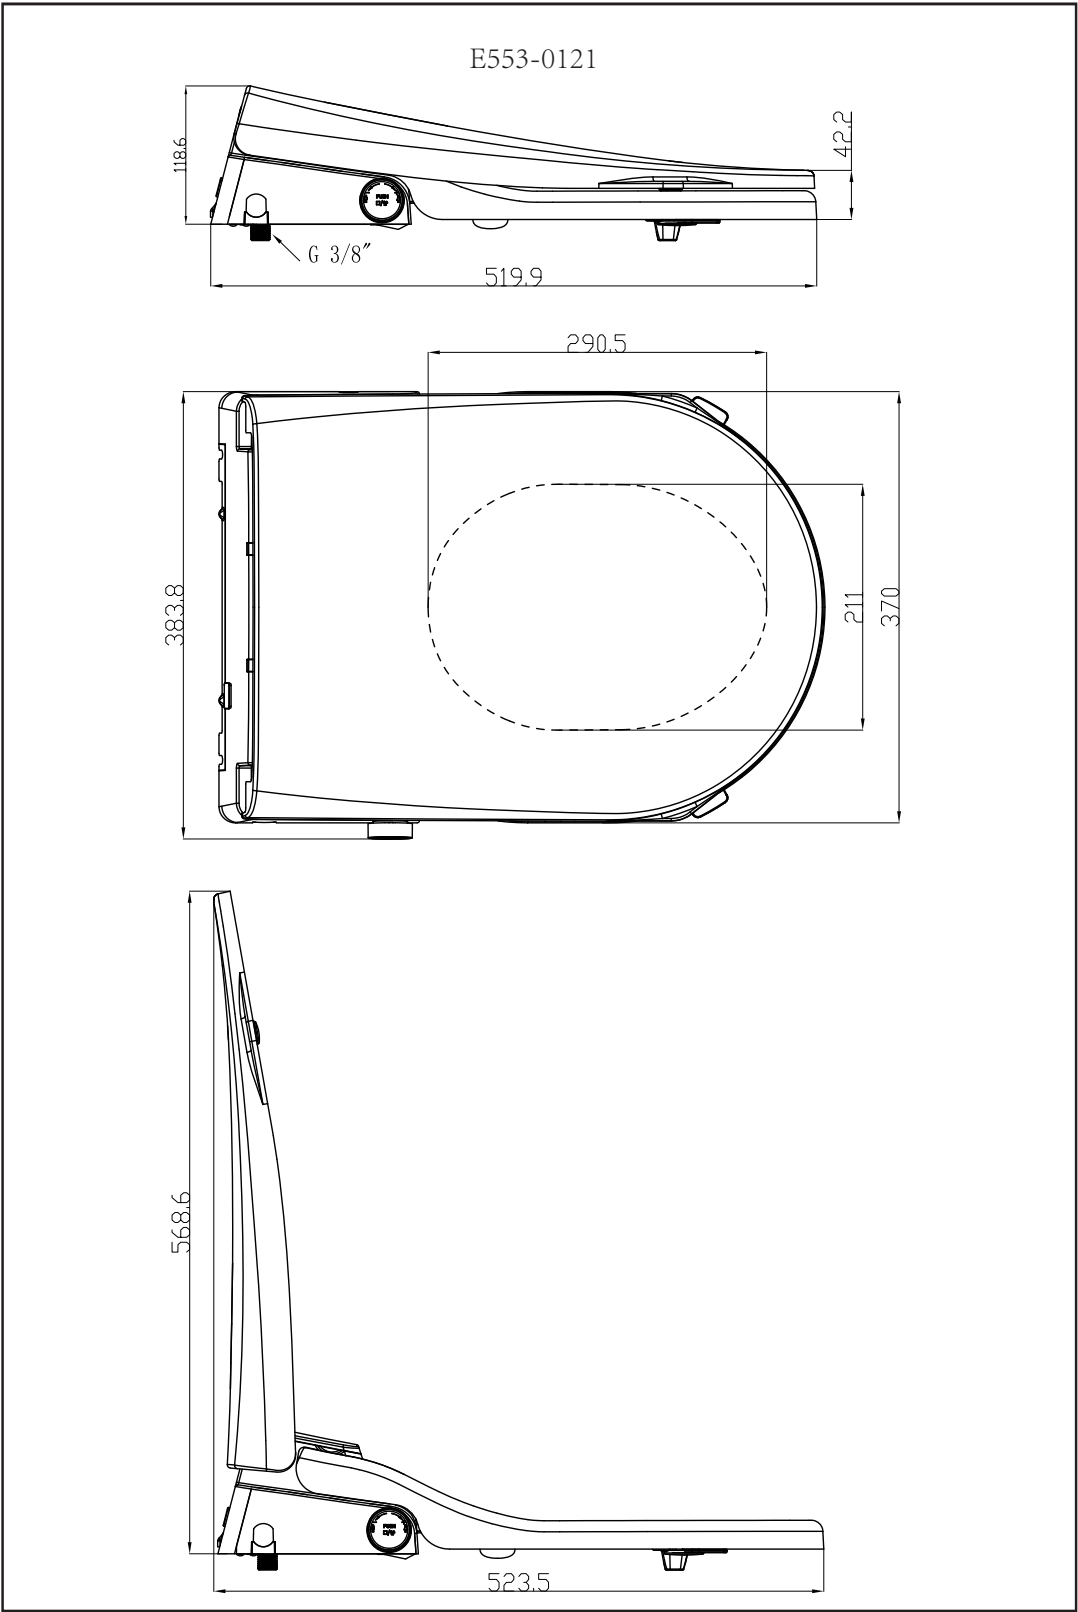


The dimension of toilet

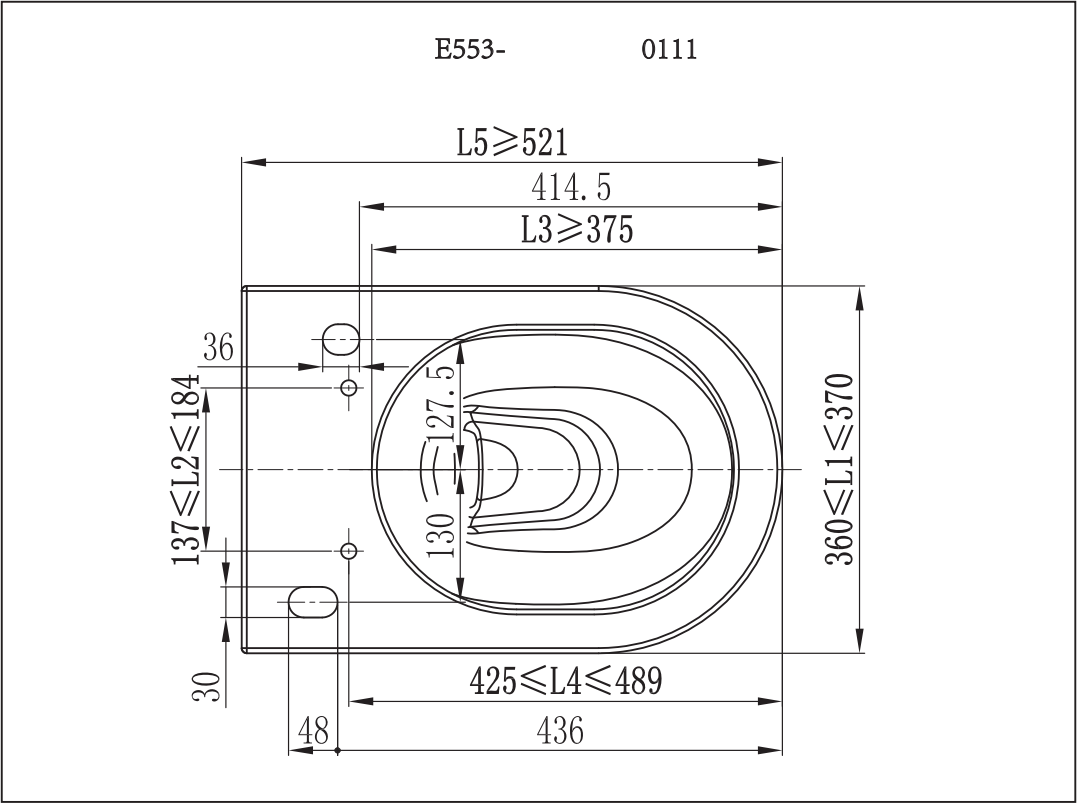


Installation Steps
for right side model

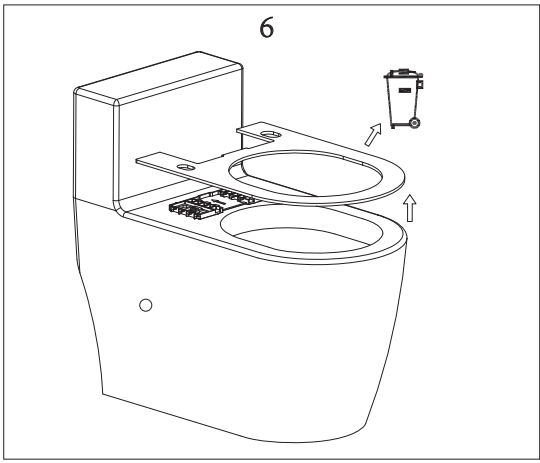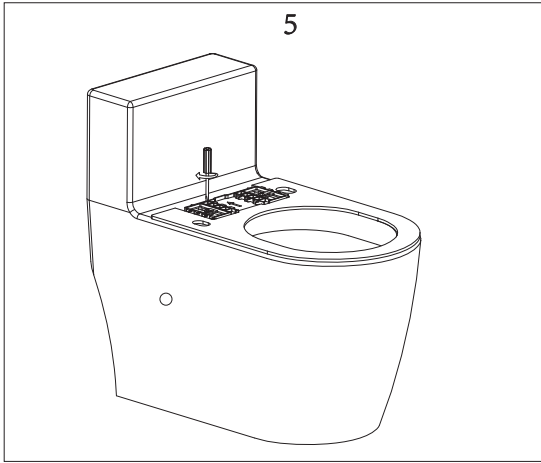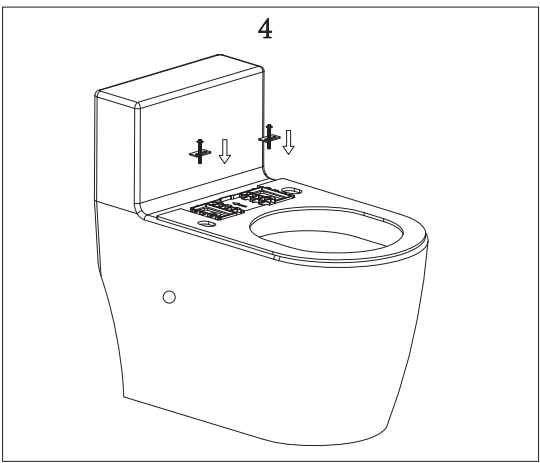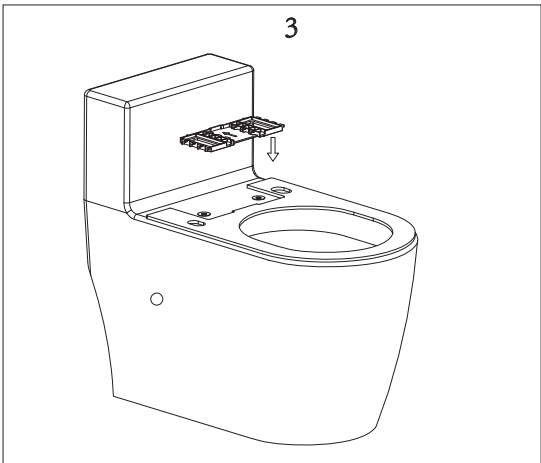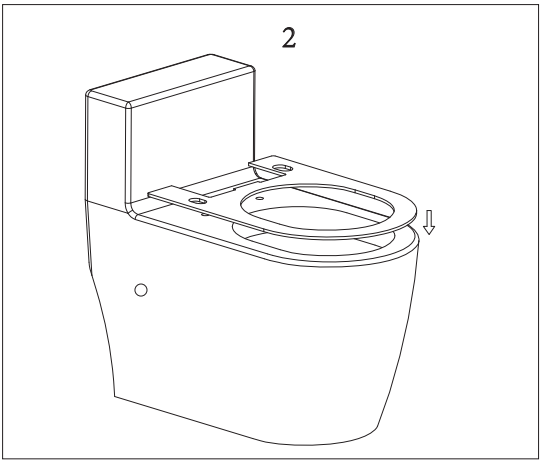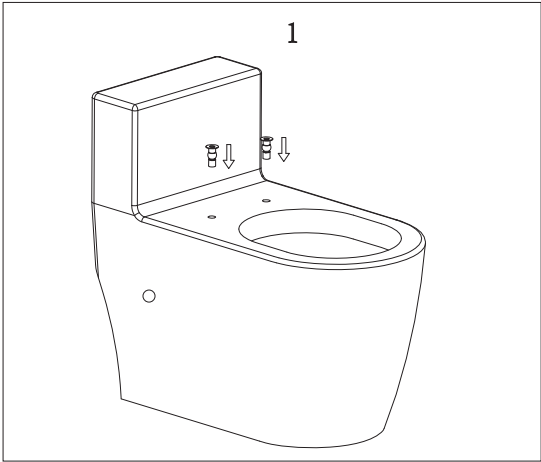


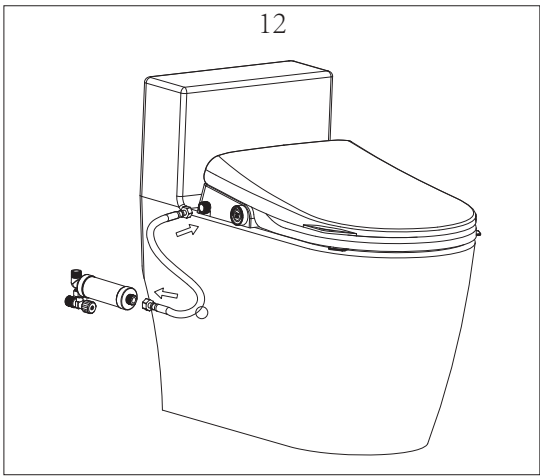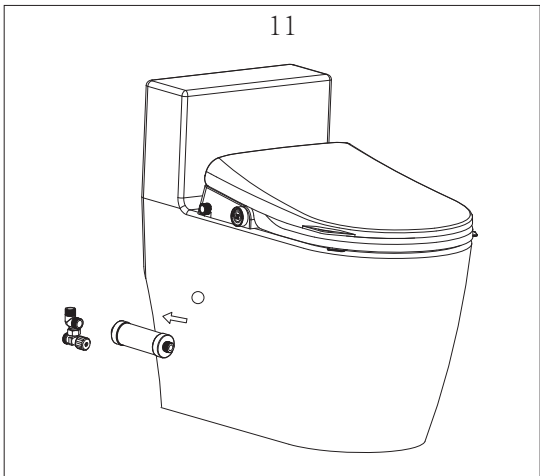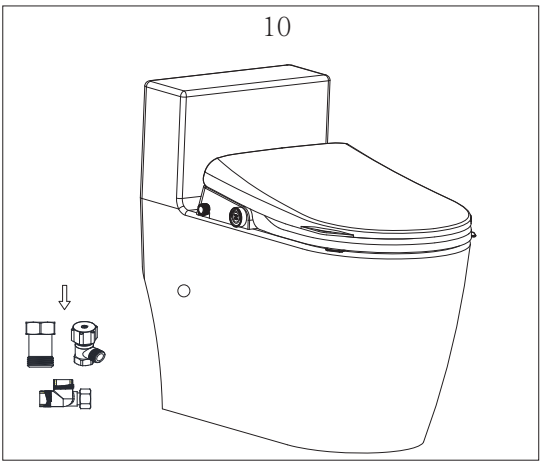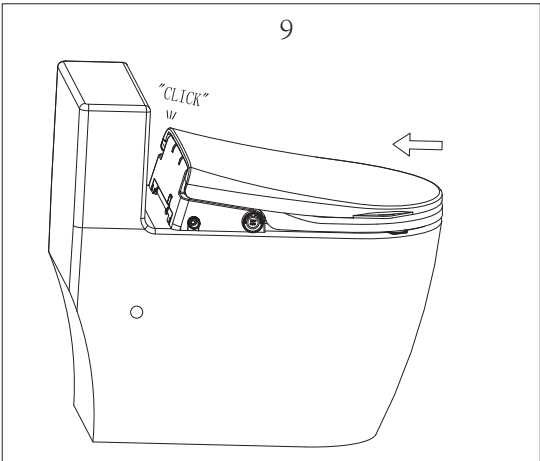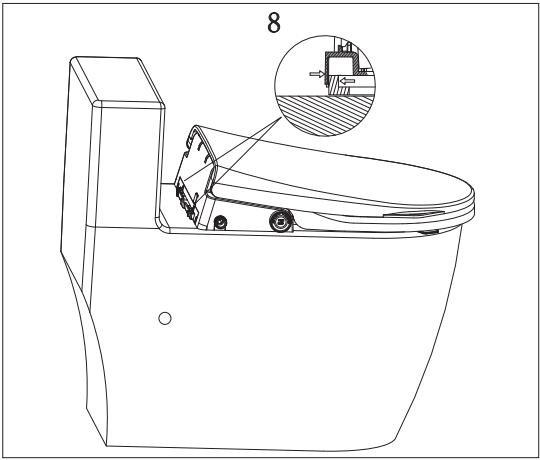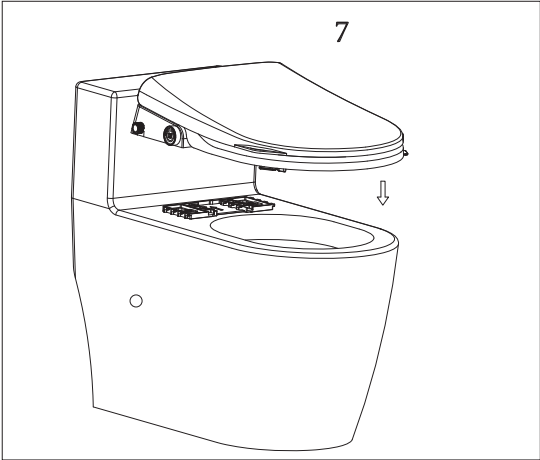


13

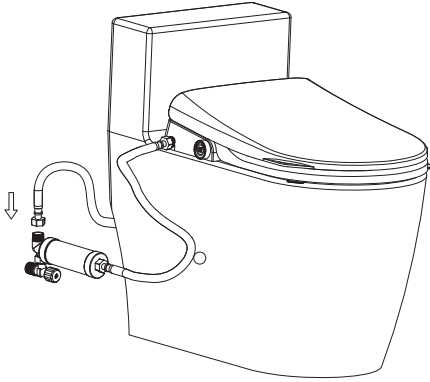


14

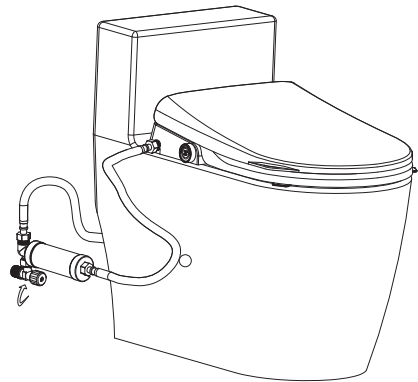

15

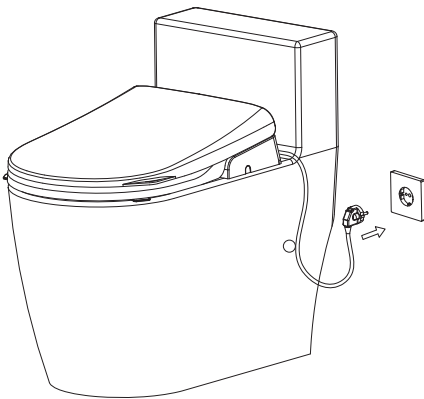


16

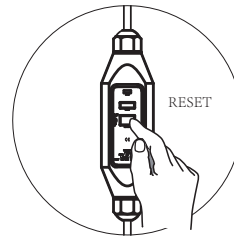




Installation must be performed by qualified and licensed tradesmen. Failure to do so may result in damage to property, personal injury or death.

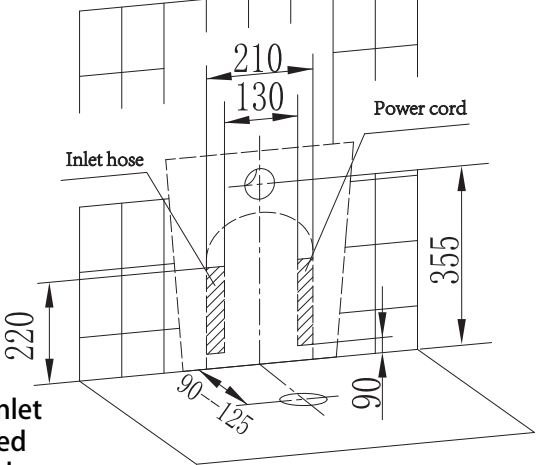


Before installation, ensure the water inlet hose and power connection cord is marked out/accommodated for accordingly.

1

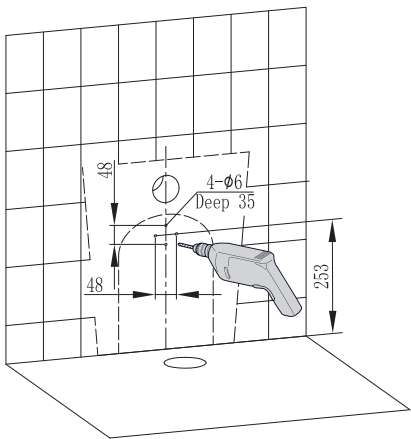


2

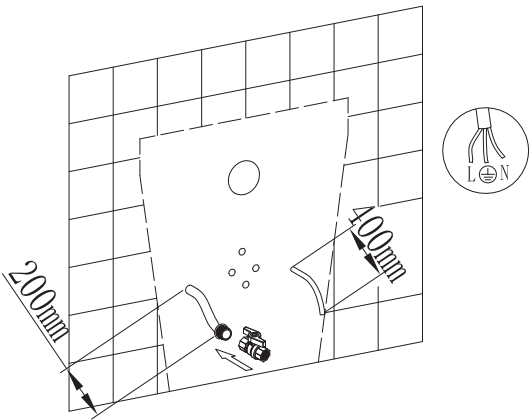


10 Sec


3

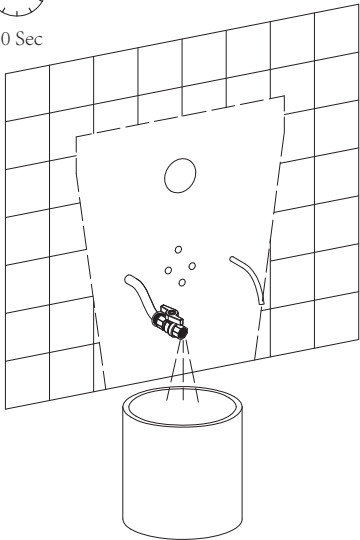


4

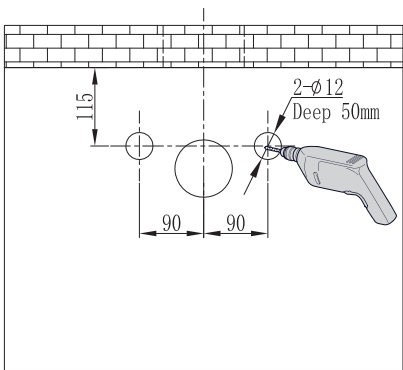


5

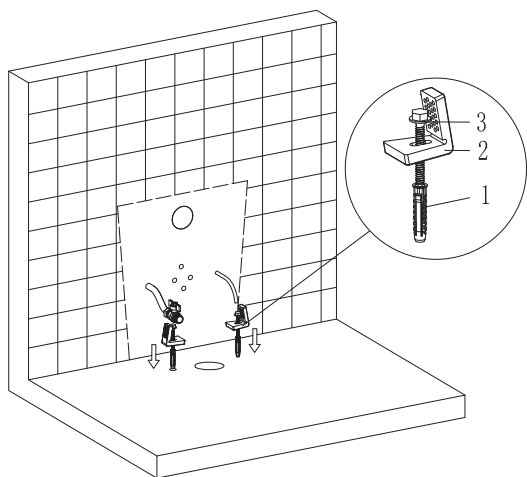


6

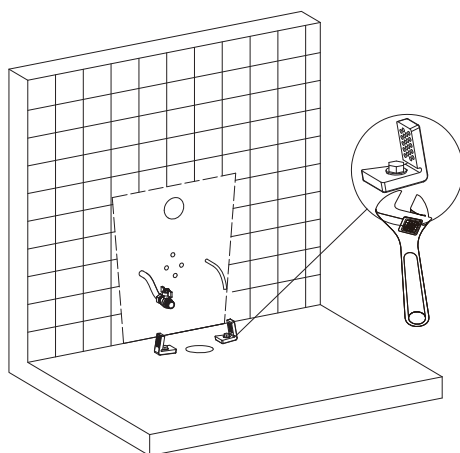


7

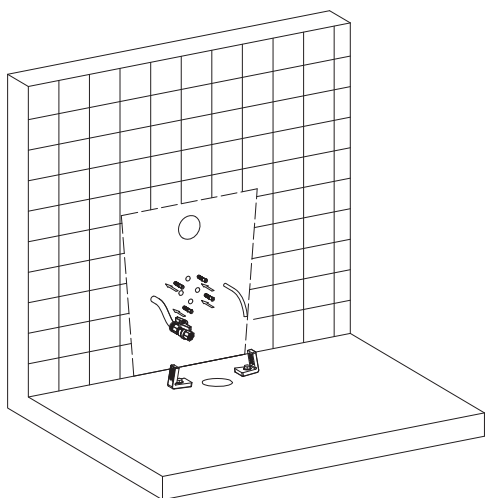


8

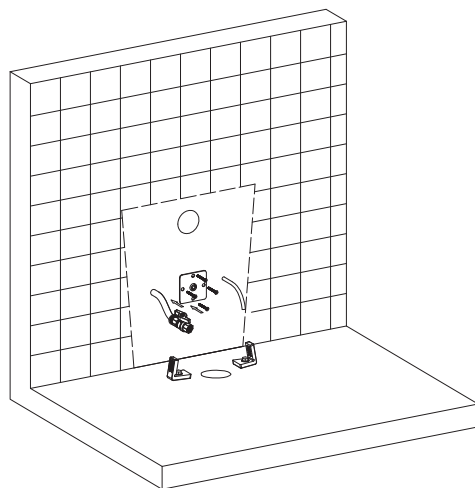


9

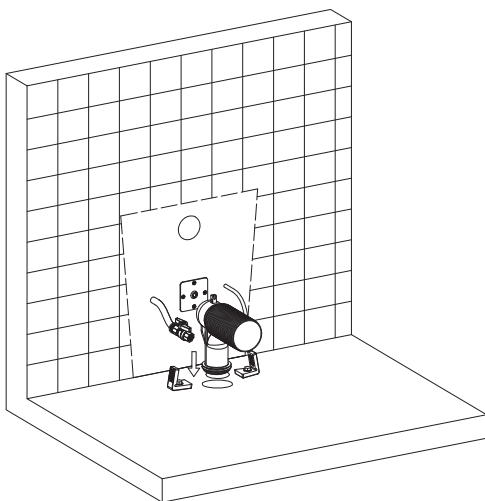


10

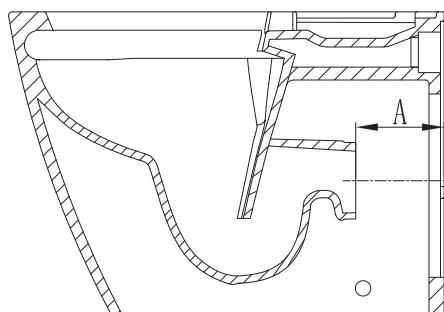


11

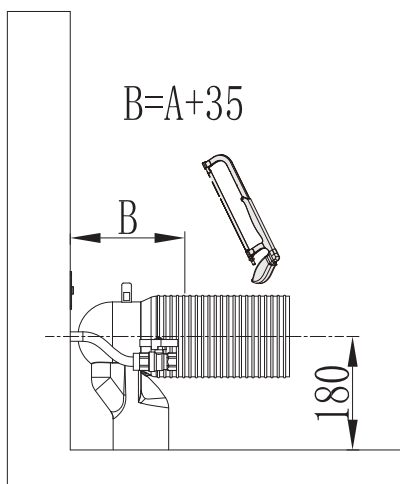


12

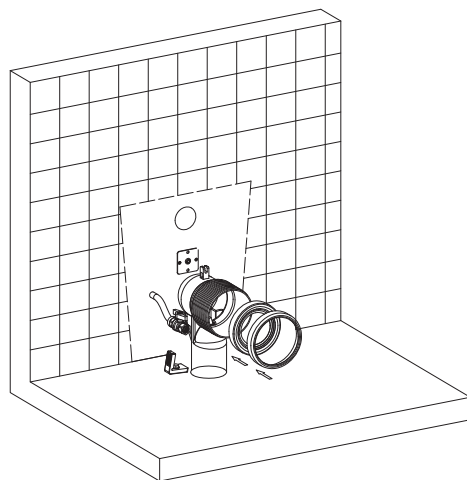


13

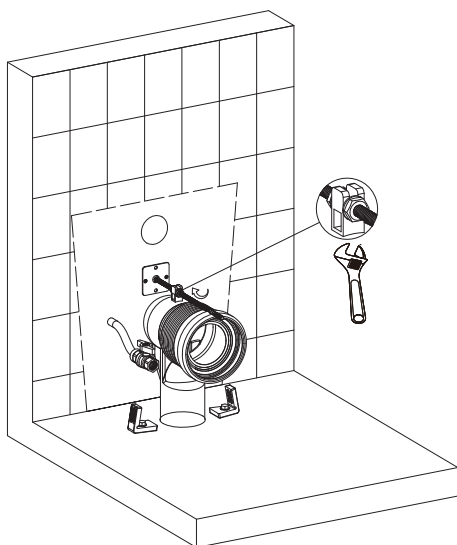


14

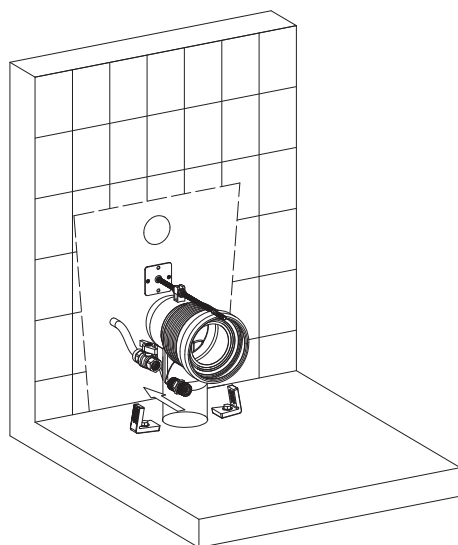


15

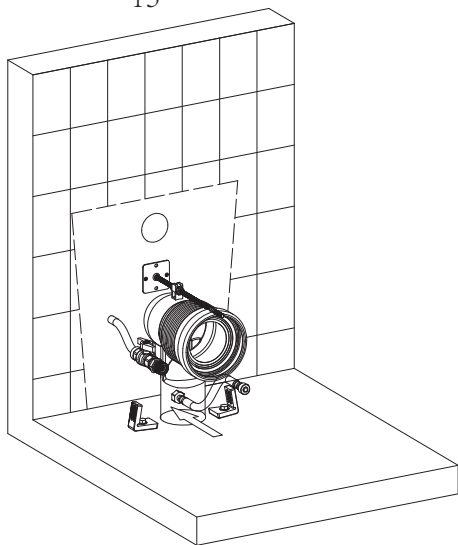


16

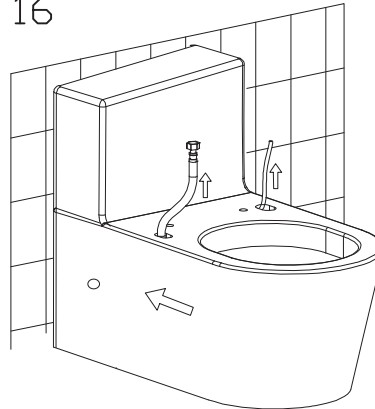


17

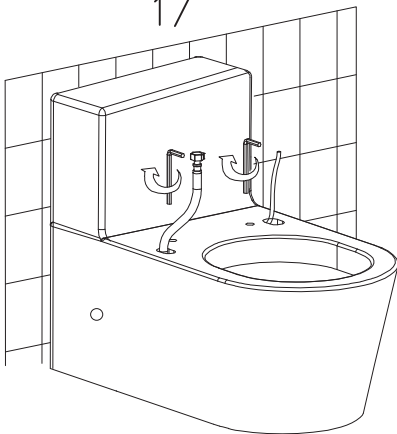


18

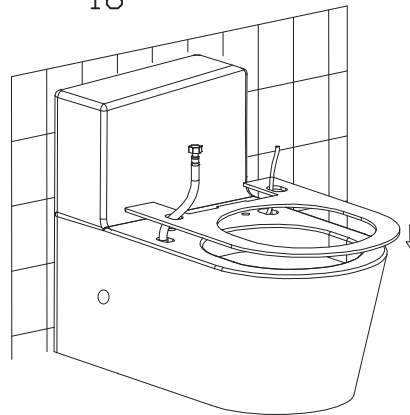


19

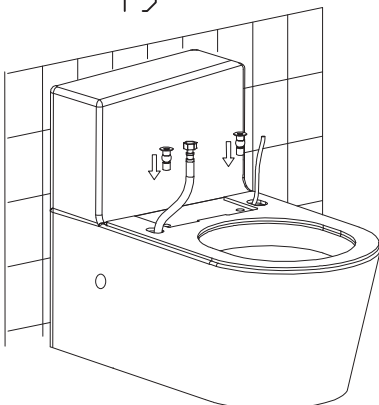


20

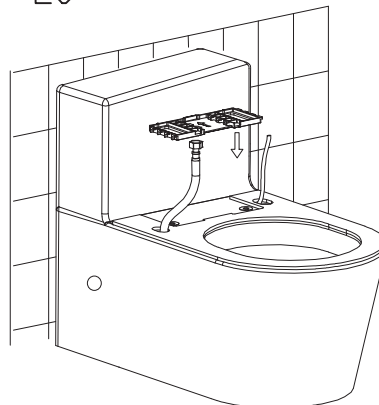


21

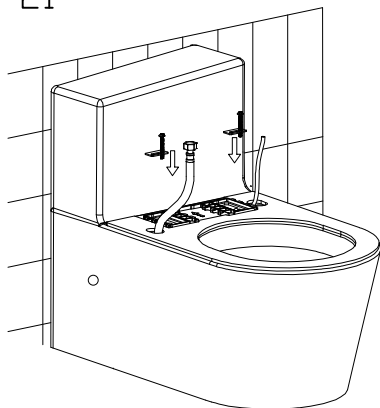


22



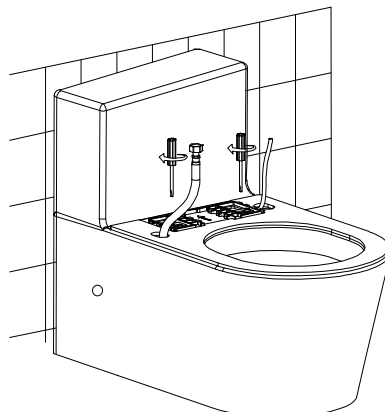


23

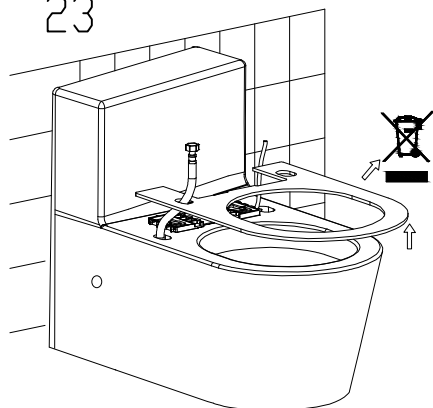


24

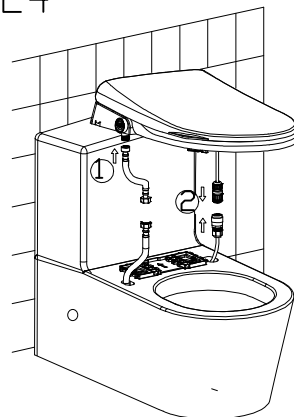

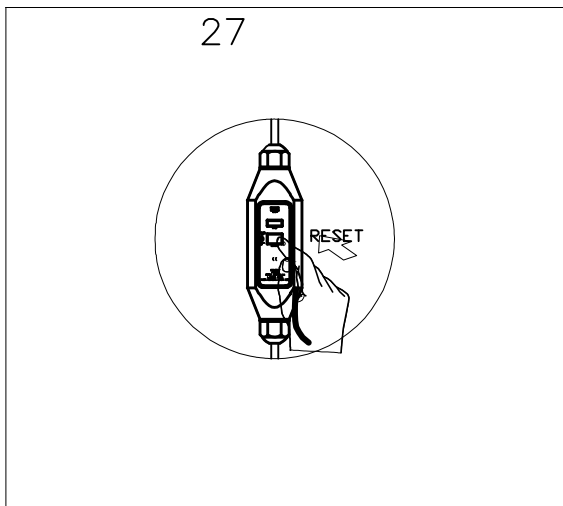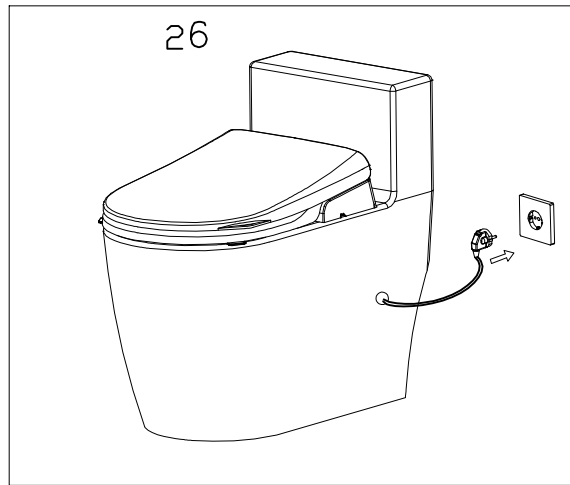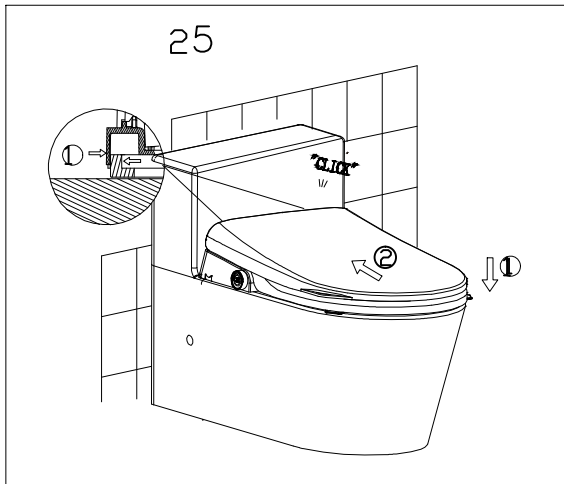

Install the remote control

Recommended installation area

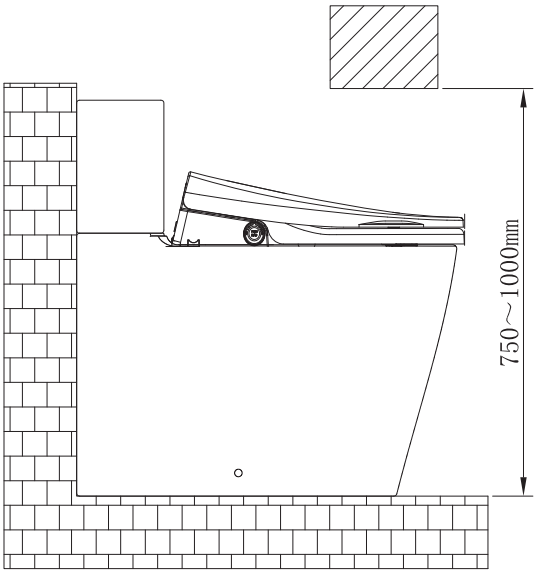

Mode A

Mark


A1

A2


A3

A4

A5

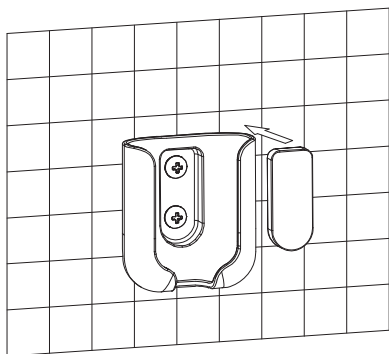


A6

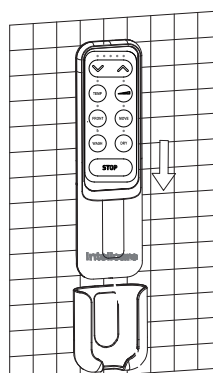


Mode B

B1

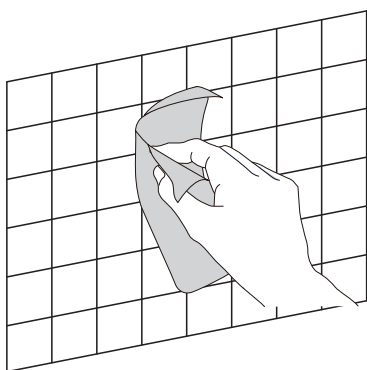


B2

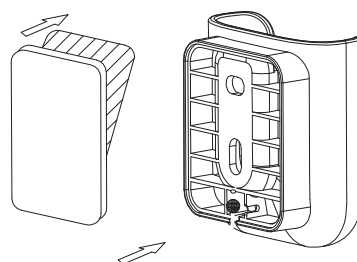


B3




B4

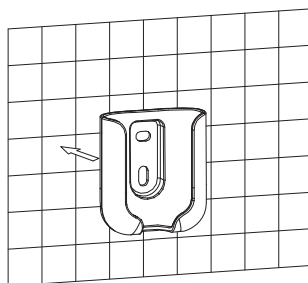


B5

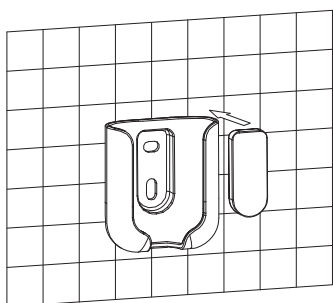

B6

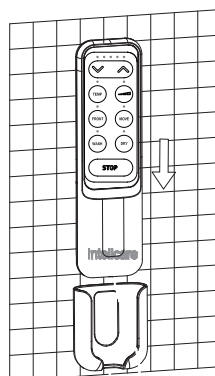

Overview

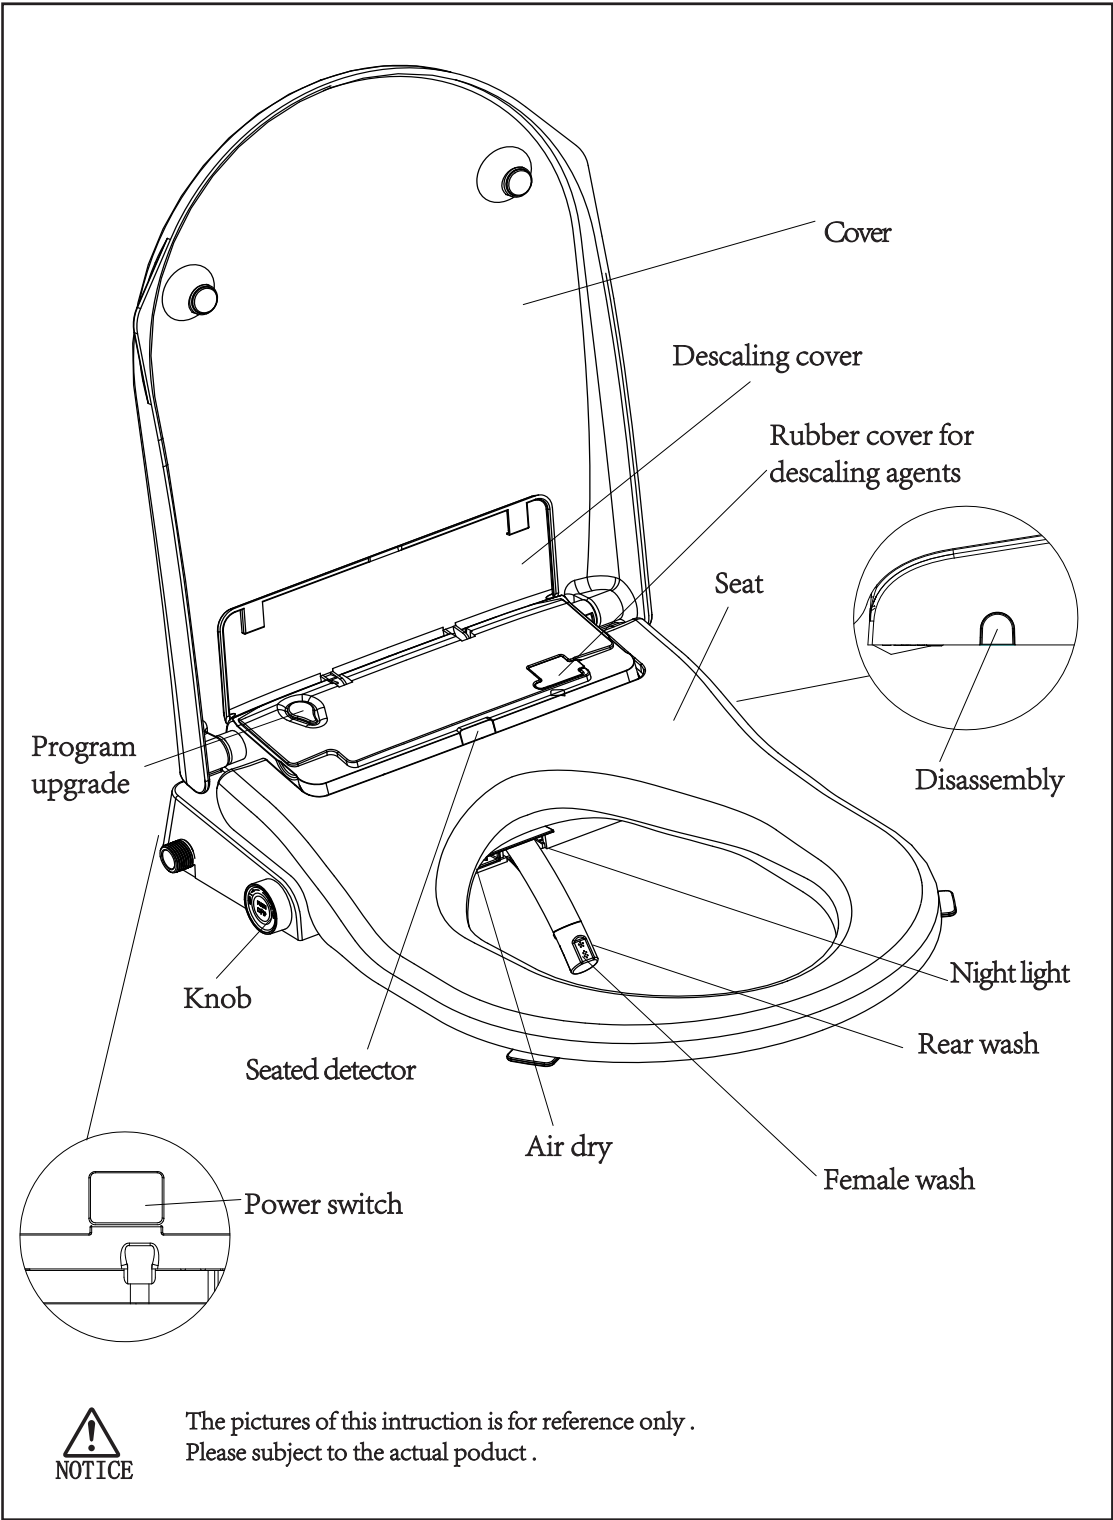



NOTICE

Before using, the remote control requires 2 batteries (type 1.5v LR03 AAA)

Rear wash /Female wash


- **Be seated**

Press the " WASH" or "FRONT "button then it start to wash. It will stop after 3 minutes (at Constant temperature mode) and 1 minute (at Gradual cooling mode). You can stop washing during this period by pressing the "Stop" button on the remote control or press the knob on the body.



OR

You can operate by rotating the knob . Rotate the knob in the clockwise direction to activate "Female wash" and the anticlockwise direction for "Rear wash" . It will stop after 3 minutes and start dry . You can stop washing before this by pressing the knob or the "Stop" button on the remote control.

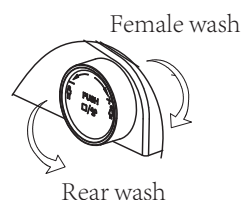

Note:

While Rear wash or Female wash , it will wash at the fixed position for about 10 seconds , and movable wash for about 18 seconds , then regain to the fixed position until to the end .

Massage Operation

- **In the process of WASH or FRONT**

Press the " WASH" or "FRONT "button on the remote control then it will start to oscillate . Press it again the washing will be on the diferent massage mode : pulsate , oscillate + pulsate.



Dry Operation

- **Be seated**

Press the " Air dry" button .It will stop after 3 minutes. You can stop drying during this period by pressing the "Stop" button on the remote control or press the knob on the body.




OR

- **Be seated**

- **It is not in the process of Rear or Female washing**

Press the knob then it start to dry . It will stop drying after 3 minutes. You can stop drying during this period by pressing the knob or press the "Stop" button on the remote control .

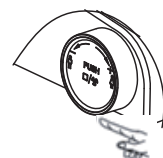

Stop Operation

- In the process of Rear washing , Female washing or drying

Press the "Stop" button on the remote control or the knob on the body, it will stop washing or drying .

STOP




Adjusting flow rate

- Default 3rd
- In the process of Rear washing , Female washing or drying

Press the "Flow rate" button on the remote control then press the "Increase" or "Decrease" button to adjust the flow rate of water or air . The lamp of step will be lighted up.

OR


You can operate by rotating the knob . The flow rate of water or air will increase in the clockwise direction and decrease in the anticlockwise direction .

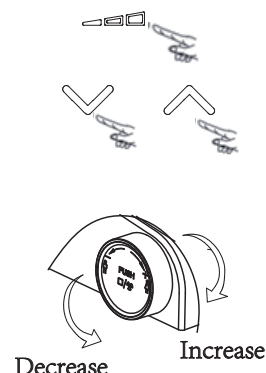

Adjusting the nozzle position

- Default 3 rd
- In the process of Rear or Female washing

Press the "Position" button on the remote control then press the "Increase" or "Decrease" button to adjust the position of nozzle . The lamp of step will be lighted up.

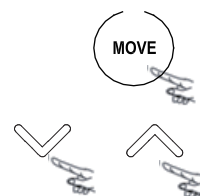


Adjusting temperature

- In the process of Rear washing , Female washing , or drying

Press the "Temperature" button on the remote control then press the "Increase" or "Decrease" button to adjust the water temperature or air temperature . The lamp of step will be lighted up.

OR

Keep pressing the knob and rotate it. The water temperature or air temperature will be increased in the clockwise direction and be decreased in the anticlockwise direction .

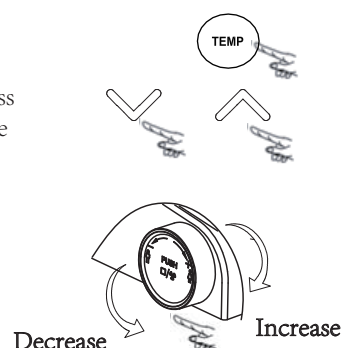

Setting Night Light

- Always on mode for the night light by default

Keep pressing the "STOP \ SHIFT" button on the remote control ,then press the "Flow rate" button once . Press it again the night light will be on the diferent mode just as "close", "always on" and " smart".

Close mode : when one indicator light is on


Always on mode : when two indicator lights are on Smart mode: when three indicator lights are on



OR

- Open the cover and seat , not be seated

Rotating the knob in the anticlockwise direction. The night light will be on the diferent mode just as "close", "always on", "smart".

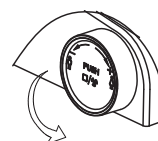


NOTE: The "smart" mode refers that the night light will light up in a dark environment and light off in a bright environment.

Going Into Power Standby Mode

- Close the cover

Keep pressing the knob for more than 6 seconds , it will go into power standby mode .

Press again the button for more than 6 seconds to restart it .

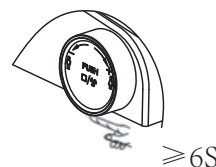


Setting Sound

- The sound is on by default.
There is a BEEP when the bidet has received commands or signals

Keep pressing the "STOP \ SHIFT" button on the remote control ,then press the "Position" button once .Press it again the sound will be on or off.

off mode : when one indicator light is on


on mode : when two indicator lights are on

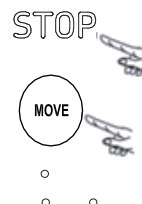

OR

- Not be seated


Keep pressing the knob then rotate it. The sound is "ON" in the clockwise direction and "OFF" in the anticlockwise direction.

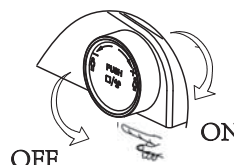

Breathing lamp setting

- Always on by default

Open the cover and be seated , without washing and drying , then always press the knob for 6S .The breathing lamp will be lighted off . It will be lighted up again when pressing the knob for 6S .

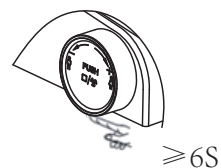


Setting water temperature mode

- Constant temperature by default

Keep pressing the "STOP \ SHIFT" button on the remote control ,then press the "Temperature" button once. Press it again the water temperature mode will be "constant " or "cooling gradually ".

Constant mode : when one indicator light is on

 Cooling gradually mode : when two indicator lights are on




NOTE:

The "Constant " mode refers that the water temperature will be constant during the washing
The "Cooling gradually " mode refers that the water temperature will be cooling gradually during the washing , until it is at the same temperature as the inlet water.


Resetting Thermostat

- If the device is stored in a high temperature environment (such as room temperature exceeds 45 degrees Celsius), it is necessary to do as follows. Otherwise the washing water may not heat up.

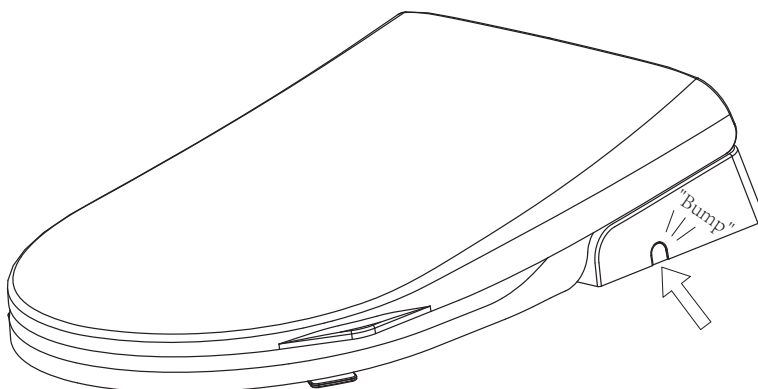

One-ON-One Setting

- Install several electronic bidets in the same area, if you want every remote control to control the specified electronic bidet, please complete setting as per following steps.
1. Keep pressing the "stop" button and "temperature" button on the remote control at the same time for a few seconds, then the step indicator will be on in turn .
 2. When the "temperature" indicator flickers , release these two buttons.
 3. Press the "increase" or "decrease" button to change different product ID code with corresponding indicator lights up. There are 32 ID codes in total. It is on the first code by default and all of the step indicators are off.
 4. Press the knob of body .
 5. Press the "stop" button on the remote control .

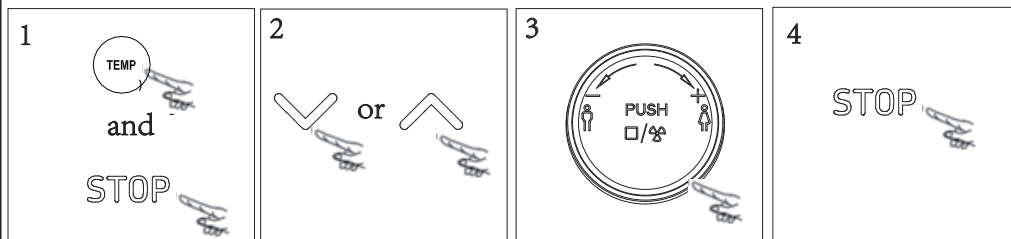

Care and cleaning


- Genaral care and cleaning recommendations

Maintaining interval	Maintaining activity
Daily	Remove water drops with a soft ,lint-free cloth to avoid limescale stains
Weekly	Clean all surfaces and corners .Clean the spray nozzle if required.
Every half year	Replace the filter if required.

- Cleaning agents and tools



 soft cloths ,lint-free cloths



mild cleaning agents that are kind to the skin.



Do not use the cleaning agents of strong acid and alkali
To clean the E-bidet , do not use the hard brush .e.g. toilet brush nylon brush
To clean the WC ceramic appliance ,do not use the matal brush





Self-clean the tank



Not used for more than 72 hours, when the user is seated ,it will open the self-cleaning for about 1 minute. All the buttons are invalid during the self-cleaning and it will return to normal after the self-cleaning .

Replacing the filter

- The filter has a service life of half a year . This is depended on the environment of water. The filter should be replaced when the wash flow is too small .

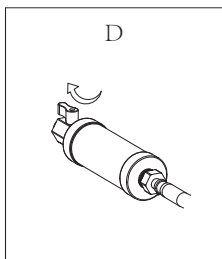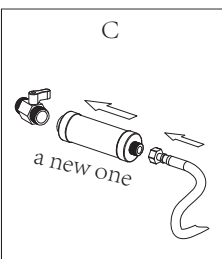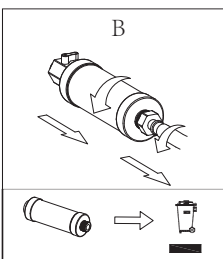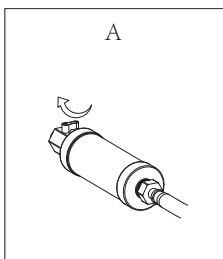

Descaling the device

- You will need to descale the device at least once a year ,or more often depending on the number of shower cycle and the water quality environment .
- During the descaling procedure , you can continue to use the toilet without the shower functions.
- The descaling procedure lasts up to 30 minutes. During this time , the LED light of knob will always flashes . Once the LED stop flashing and resume breathing light , the spray functionality is once again ready for operation .
- Please use the descaling agents of less foam.




NOTICE

Damage to human body and the device from aggressive descaling agents .


1

Open the cover .

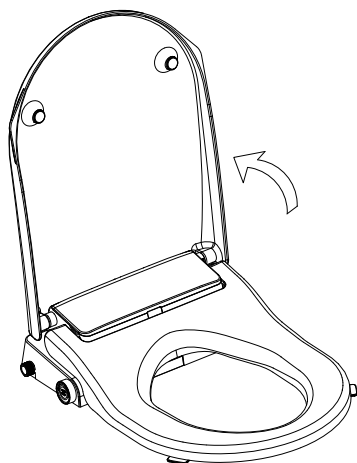

2


Open the descaling cover .

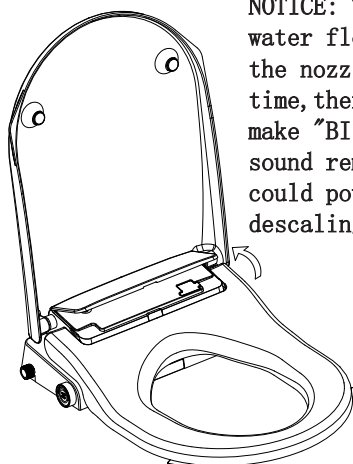

NOTICE: There is water flow from the nozzle at this time, then will make "BI""BI" sound remind you could pour the descaling agents .

3


Open the rubber cover .

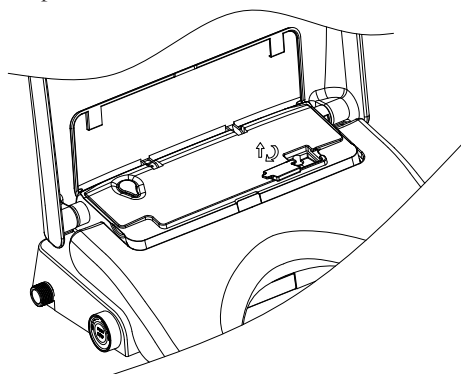

4


Pour descaling agents .

Dosage: about 150mL

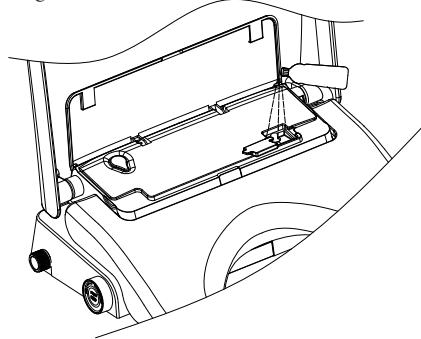

5

Close the rubber cover and descaling cover .

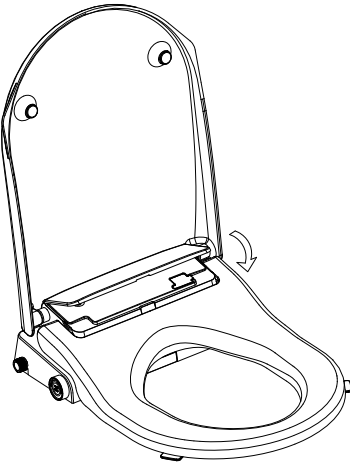

6

Close the rubber cover and descaling cover.


Then it will start the descaling procedure. During the descaling procedure , you can continue to use the toilet without the shower functions .

It will last for about half an hour .During this time the LED of knob will be flashed . Once the LED stop flashing and resume breathing light ,and with a long "BI" , the spray functionality is once again ready for operation .


Drain the water tank




- 1. The water and power must be cut before you disassemble the E-Bidet
- 2. Do not invert or tilt it before you finish draining the water tank

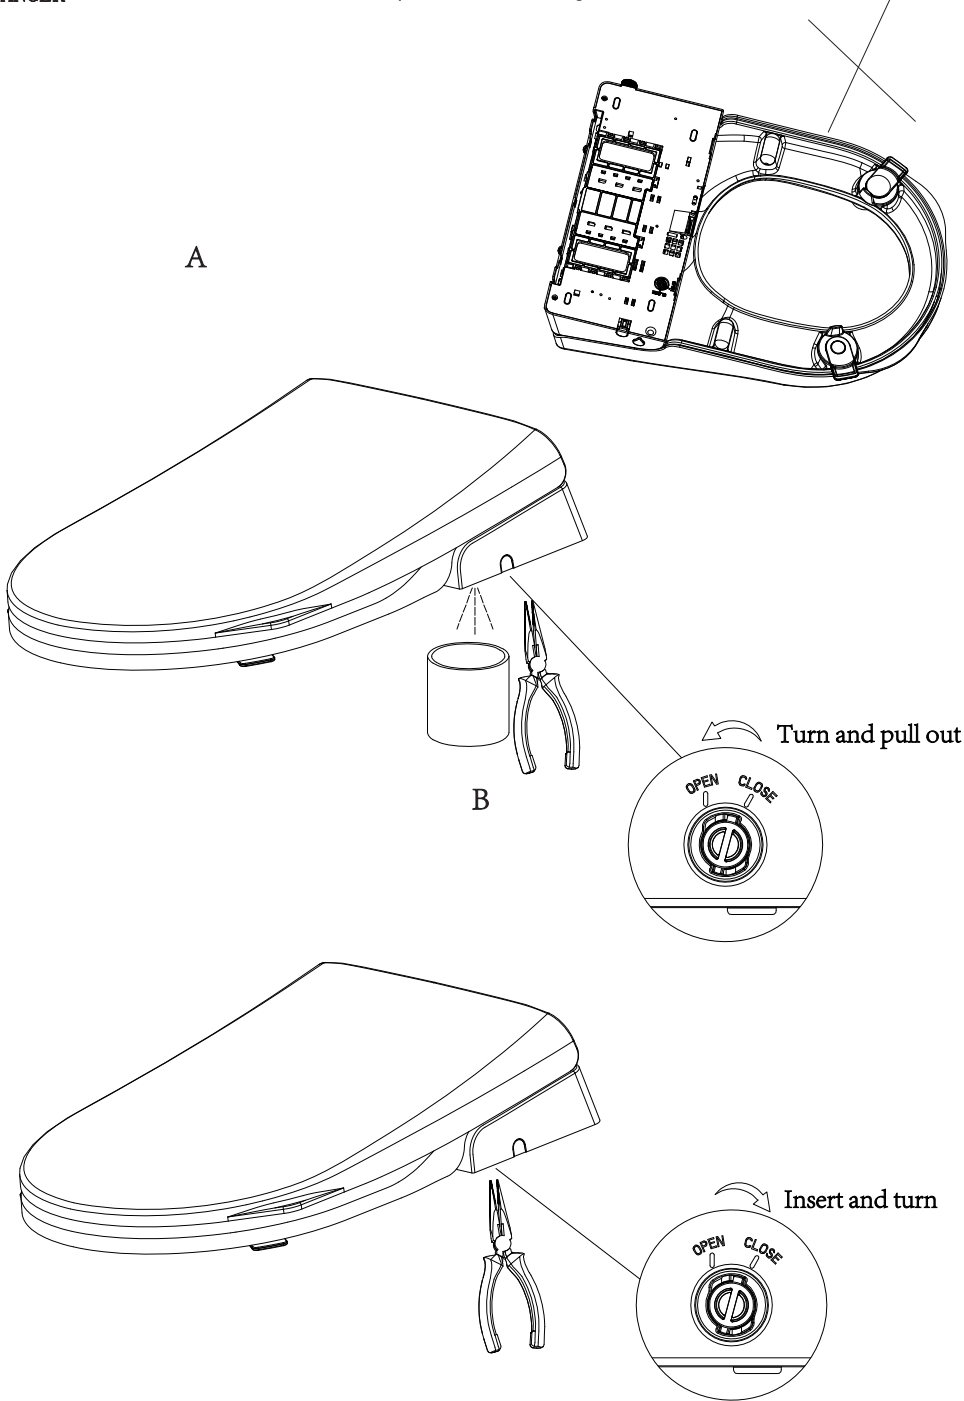

Release cover & seat

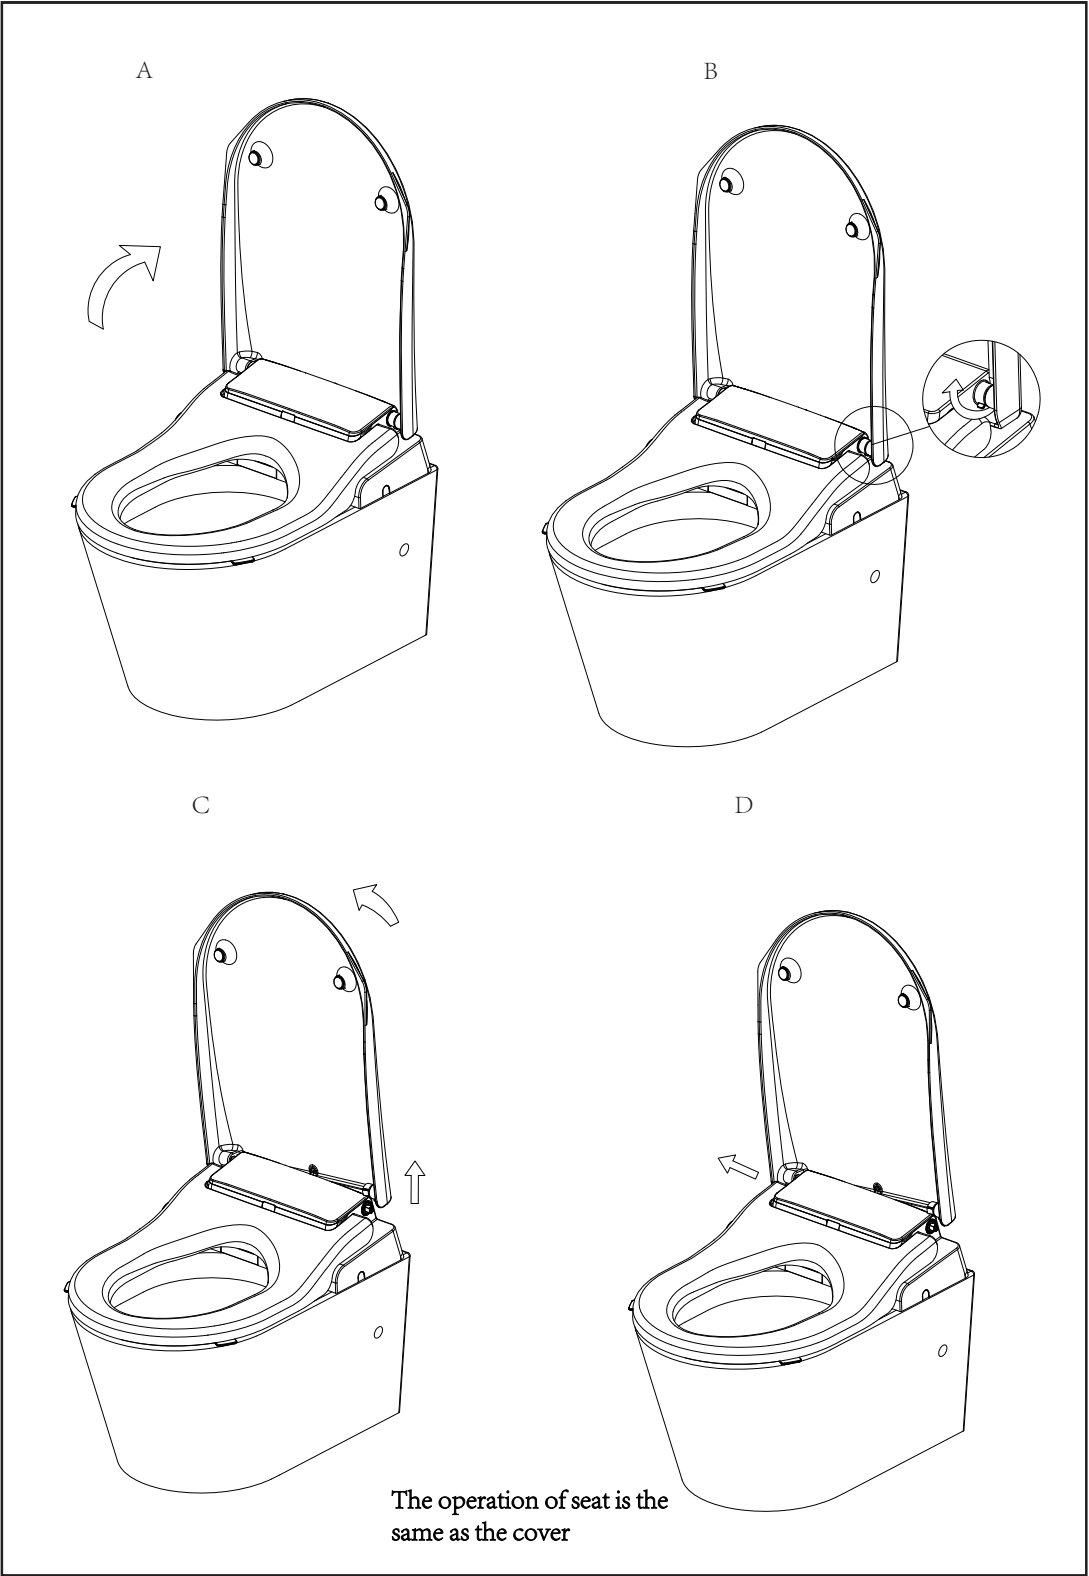





Reassemble cover & seat

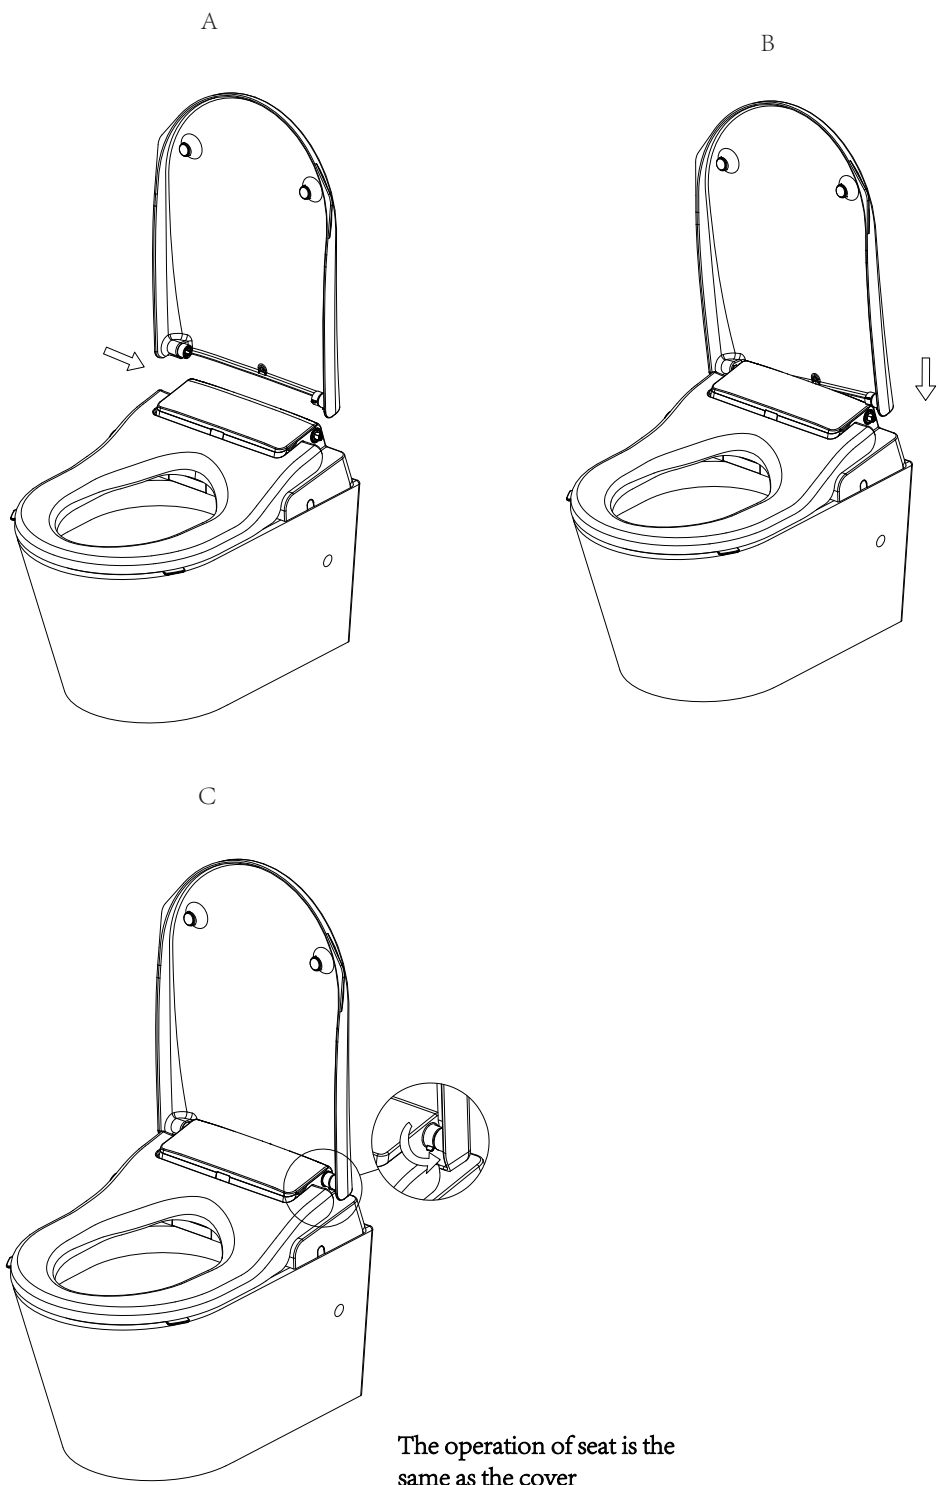

Nozzle cleaning

- The nozzle will be cleaned before washing and after washing .
- In non-working state

Keep pressing the "STOP \ SHIFT" button on the remote control ,and press the "Decrease" button once , or open the cover and seat then rotate the knob in the clockwise direction ,then the nozzle will extend and keep flowing. It will go back after 5 minutes or press the " STOP " button .

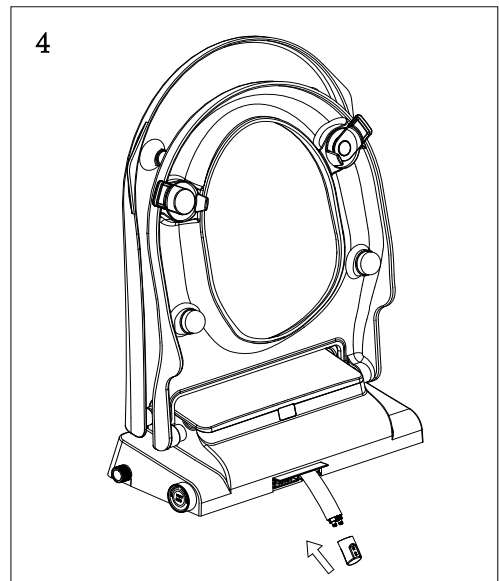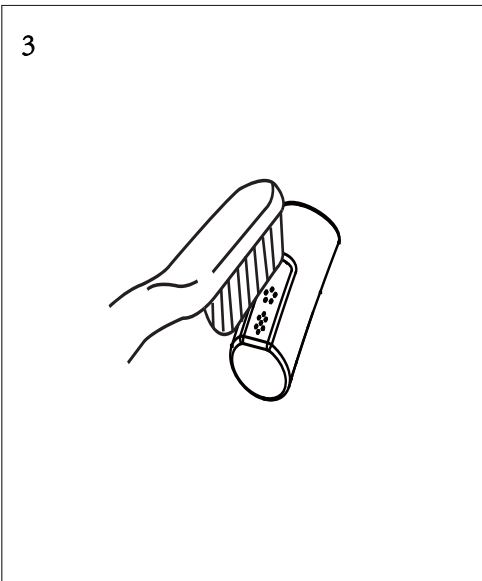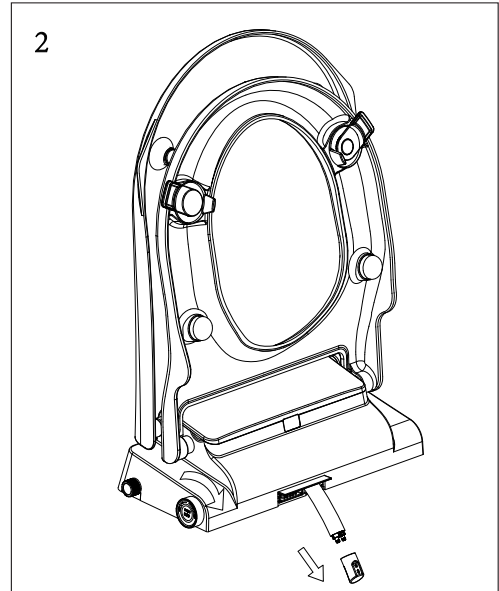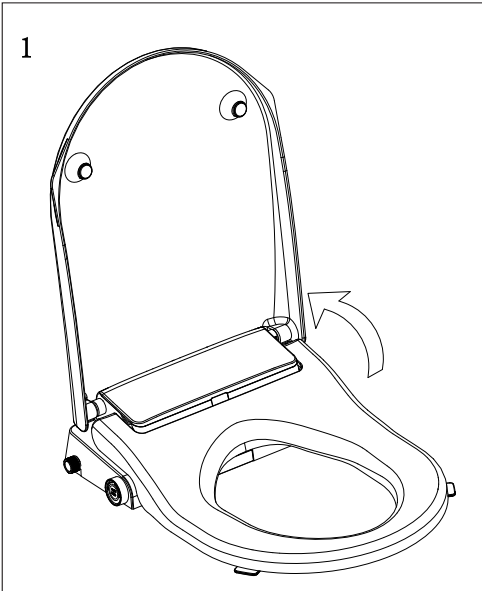


Replacing the batteries

- The remote control requires 2 batteries (type 1.5V LR03/AAA).
When the level light flashes continuously, please replace the batteries in time.



1. Non-rechargeable batteries are not to be recharged
2. Rechargeable batteries are to be removed from the appliance before being charged
3. Different types of batteries or new and used batteries are not to be mixed
4. Batteries are to be inserted with the correct polarity
5. The exhausted batteries are to be removed from the appliance and safely disposed of
6. If the appliance is to be stored unused for a long period, the batteries should be removed
7. The supply terminals are not to be short-circuited

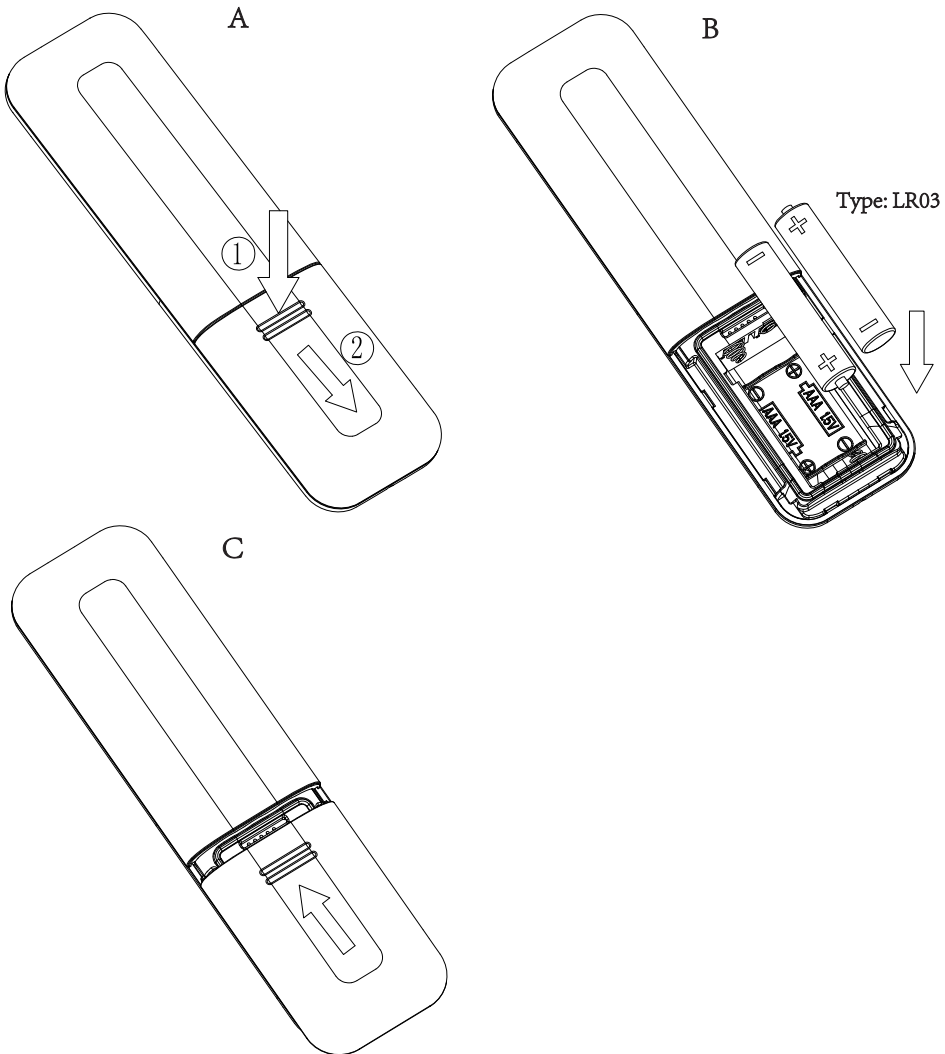

Troubleshooting

Problem	Potential cause	Suggested action
The washing can not work	1. The power supply may not be opened	Please turn on the power
	2. The water supply may not be opened	Please open the inlet water valve, or check if there is a water outage
	3. The filter (if has) may be blocked	Please replace a new filter .It has a service life of approx. half a year
	4.Maybe not in the seating state	Please sit on the seat and adjust sitting position
	5.Maybe the cover is closed	Please open the cover and sit on the seat
	6.Maybe it is not used for more than 72 hours	Not used for more than 72 hours ,when the user sit down ,it will execute the self-cleaning for about 3 minutes. All the buttons are invalid during the self-cleaning and it will return to normal after the self-cleaning
The nozzle goes back suddenly	1.The washing cycle is 3 Minutes at Constant temperature mode and 1 minute at Gradual cooling	This is normal and please re-press the "wash" button to start washing again
	2.There may be some problems of water supply	Please check if there is a water outage
	3.Maybe the seated sensor detects the user left the seat	Please adjust sitting position
	4.Maybe the cover is closing	Do not put down the cover when it is washing
Low water flow rate	1.The water flow rate may be set at low grades	Please increase the flow rate as per "adjusting water flow rate" of instructions
	2.The water supply pressure may be too low	Please check and ensure the water supply pressure is ≥ 0.5 bar (dynamic pressure)
	3.The filter (if has) may be blocked	Please replace a new filter .It has a service life of approx. half a year
	4.The nozzle may be blocked	Please replace a new nozzle
Low water temperature	1.The water temperature may be set at low grades	Please set the water temperature at high grade as per "adjusting temperature"of instructions
	2.Maybe the temperature of water supply is too low	Please set the water temperature at high grade as per "adjusting temperature"of instructions, or decrease the flow rate as per "adjusting water flow rate" of instructions
	3.Maybe the thermostat of water is off	Please reset the thermostat of water as per "Resetting Thermostat"of instructions
The nozzle comes out slowly	When start washing function, the nozzle will be self-cleaning before coming out, and this will take some	This is normal
The water flows out but the nozzle do not come out	1.When start washing function, the nozzle will be self-cleaning before coming out .When the washing is over ,also have this feature	This is normal
	2.Maybe it is not used for more than 72 hours	This is normal. Not used for more than 72 hours ,when the user sits down ,it will open the self-cleaning for about 3 minutes
The dryer can not work	1. The power supply may not be opened	Please turn on the power
	2.Maybe not in the seating state	Please sit on the seat and adjust sitting position
	3.Maybe the cover is closed	Please open the cover and sit on the seat
	4.Maybe it is not used for more than 72 hours	Not used for more than 72 hours ,when the user operates the washing ,it will open the self-cleaning for about 3 minutes. All the buttons are invalid during the self-cleaning and it will return to normal after the self-cleaning
Low air temperature	1.The air temperature may be set at low grades	Please set the air temperature at high grade as per "adjusting temperature"of instructions
	2.The air heater can not work normally	Please contact local distributor
Night light is always off	1.Maybe in the bright environment.	When the night light is set at smart mode, the night light will not work when in the bright environment.
	2.The night light function may be closed.	Please open the night light function and adjust the night light mode as per " Setting Night Light" of instructions
Night light is always on	1.Maybe in the dark environment.	When the night light is set at smart mode, the night light will be always on when in the dark environment
	2.Something may be covered around the knob.	Recover the obstructions around the knob
	3.The night light may be set at always on mode	Please adjust the night light mode as per "Setting Night Light " of instructions
The nozzle goes back automatically when manual cleaning	1.The nozzle goes back after washing 5 minutes.	This is normal
	2.Maybe press the "stop" button	The manual cleaning will be stopped if press the "stop" button on the remote control.
The remote control is not function	1.Maybe there are not batteries in the remote control	Please install the correct batteries in the remote control
	2.Maybe the battery power is too low	When the battery power is too low the LED of grade will flash. Please replace the batteries
	3.Maybe the code of the bidet and remote control is not the same	Please set the code of the remote control to the correct one . See "One-On-One Setting"
There are BEEP sounds when the bidet is working	There is a short BEEP when you are sitting down , and a long BEEP when you leave. Also there is a short BEEP when the bidet has received commands.	This is normal. You can turn off the sound. See "Sound Setting"
The bidet can not work normally	Maybe there is something abnormal	Please shut off the power and turn on after one minute. If the bidet still cannot work, please contact local distributor
The light on the body flash 6 times with constantly BEEP	The water supply temperature may be too high	Please shut off the power and water supply, stop using the product, and then contact local distributor
The light on the body keep flashing	There may be something wrong with the product	Please check if the electric power and water supply are normal, cut off the power and restart the product. If the bidet still cannot work, please contact local distributor



NOTICE

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact you local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

