



1 Remove the seat from the existing toilet body.

- ▶ Release the nuts, and then remove the seat and cover from it.
- ▶ Keep the removed seat, cover and nuts in a proper place in case of using them again.
- ▶ Turn off the water.

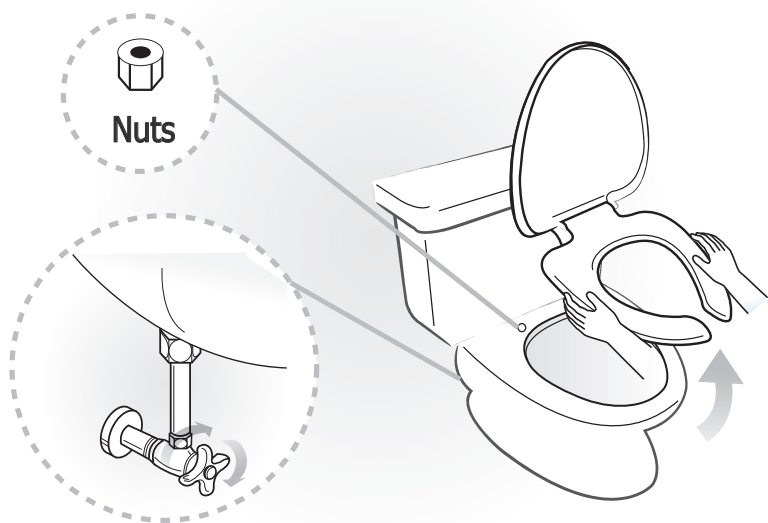


2

Remove the water hose and then install T-valve.

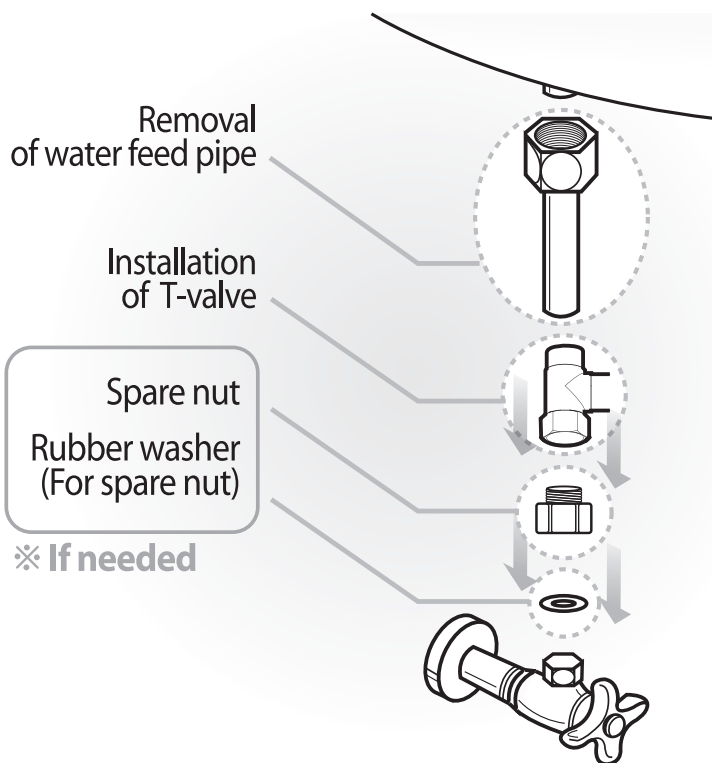


3 **Fix the bracket onto the toilet first.**

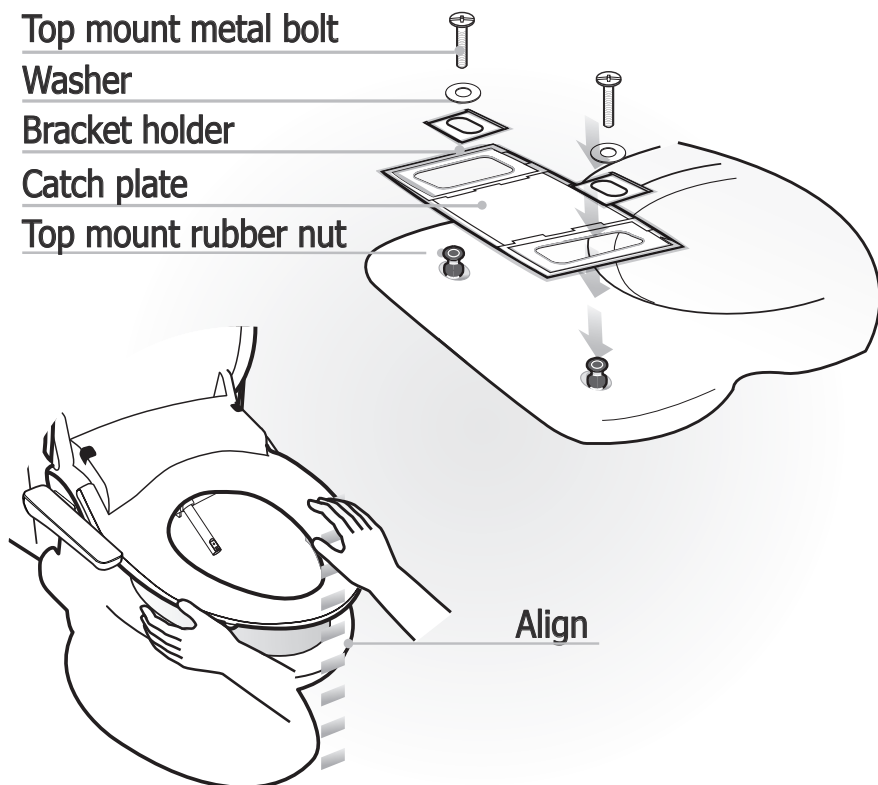


- Adjust the seat and the front part of toilet back and forth so that they can correspond with before fastening the nuts.

4 Push the main body toward the bracket completely.

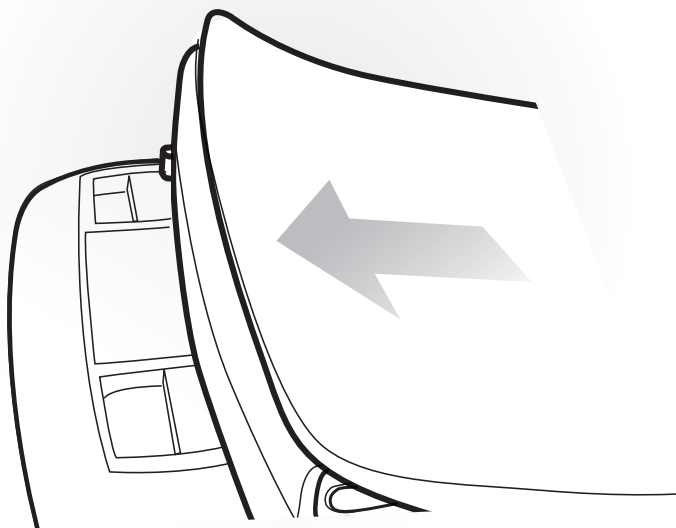


- ▶ Push it in until it sounds 'click'
- ▶ When the product is not installed well, it may cause seat apart.

- 5** After installing the T-valve, connect the bidet-use hose to the bidet body and turn on the water.

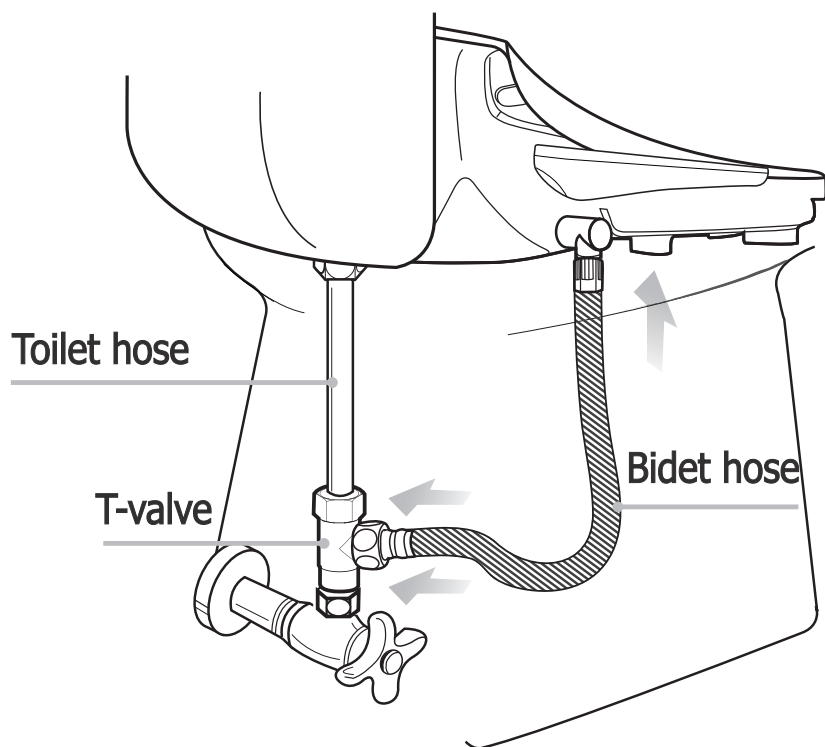


6

Insert the deodorizing cartridge into the bidet body.
(DIB-J450 only)

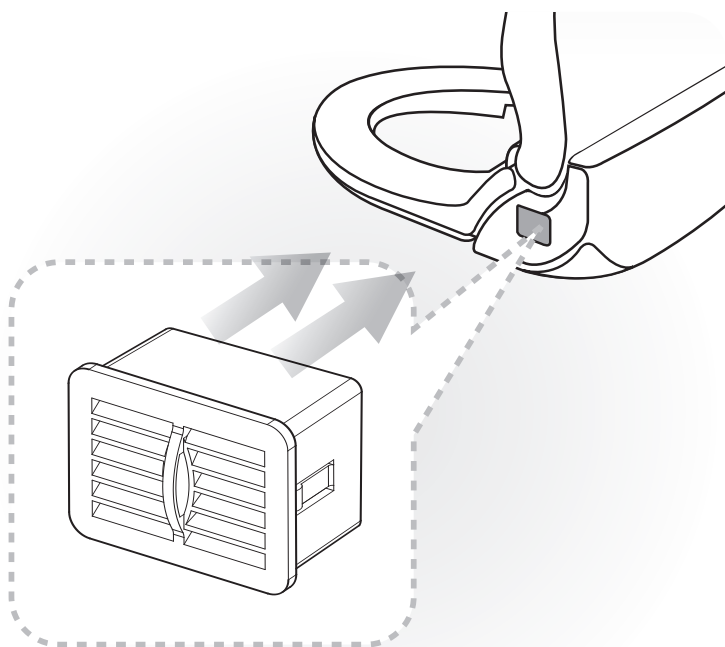

7

Turn on the water and check for leaks.

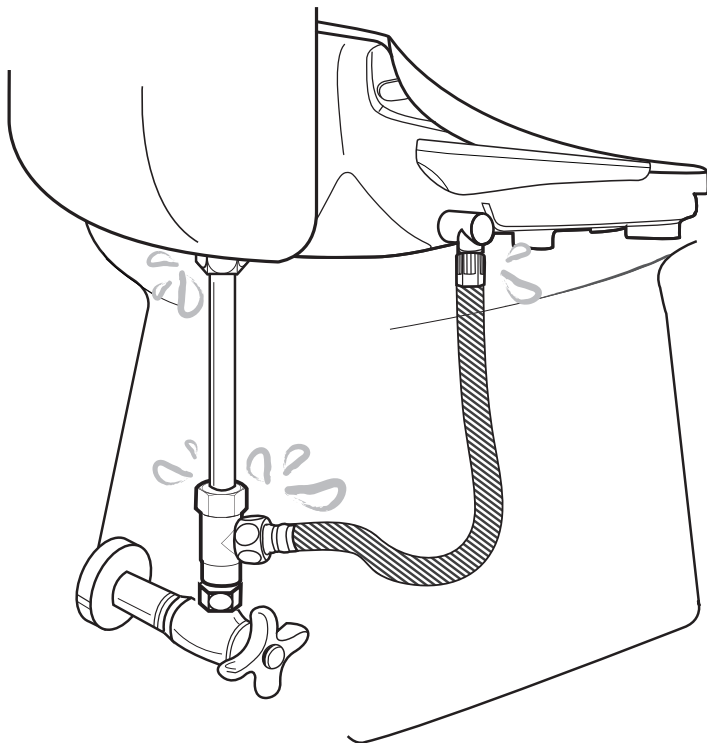

8

Be sure that the nozzle comes out and retracts when powered on.

- ▶ Don't plug the power cord with wet hands.
Risk of electric shock.

