

1

Safety Instructions

Warning Risk of hazardous or lethal damage when violating the instructions.

Caution Risk of injury or material damage when violating the instructions.

Disassembly, modification or repair is not allowed.
▶ Risk of electric shock or fire.

Don't plug or touch the power cord with wet hands.
▶ Risk of electric shock.

Don't spray water on the main body of product or power plug.
▶ Risk of electric shock or fire.

Don't use the damaged power cord or outlet.
▶ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
▶ In case there is no earth electrode, do grounding separately.
▶ When it is not grounded, it causes the failure and electric shock.

Don't fail to do grounding.
▶ Always use the outlet that encloses the earth electrode (Earth terminal mounting outlet-check if there is earth or not).
▶ When it is not grounded, it causes the failure and electric shock.

Don't locate the cigarette or flammable materials near the product; Don't throw the cigarette into the product.

Don't connect the product to the water pipe of industrial use.
▶ Risk of causing dermatitis of user.

Don't connect power to the product before its complete installation on the toilet.

Don't block the hot air hole nor put any object on the hole.
▶ Risk of burn or electric shock. (DIB-J430R, J450R only)

When removing the product from toilet, always release the power plug first.
▶ Risk of electric shock.

Don't force to lean against the cover of toilet.
▶ Risk of failure.

When the product is not used an extended period of time, remove the power plug and drain the water out of the product tank.
▶ It may cause the water rotten and result the skin disease.

Don't stand on the product; don't put heavy object on it.
▶ Risk of injury or damage to the product.

Don't force to close the cover of toilet.
▶ Risk of failure.

When cleaning, don't use toilet-use detergent, benzene, thinner, etc.
▶ Risk of damage to the product or crack.

Don't bend the connecting hose; don't force to pull it out.
▶ It may cause stoppage of water supply or leakage.

When installing, push it in until it sounds 'Click'.
▶ It may cause water leakage or mal-operation.
▶ Otherwise, it may cause fire or electric shock.

Don't use with the product out of order.
▶ When it is out of order remove the plug from the outlet and inform the service center.
▶ Otherwise, it may cause fire or electric shock.

Insert the power plug correctly in 220~240V exclusive outlet.
▶ Risk of heat or fire.

Be cautious low temperature burn.
▶ When the skin has been in contact with a seat for a long time, it may cause low temperature burn. The seat temperature should be set on Low or off when the unit is used for children, elderly persons, persons who cannot control the temperature by themselves.

Don't place the removed product upside down.
▶ Risk of the product failure.

2

Parts & Configuration & Installation

Main Body

Accessories

Operation panel

1 Remove the seat from the existing toilet body.
▶ Release the nuts, and then remove the seat and cover from it.
▶ Keep the removed seat, cover and nuts well in a proper place in case of using them again.
▶ Turn off the water.

2 Remove the water hose and then install T-valve.
▶ Removal of water feed pipe
▶ Installation of T-valve
▶ Spare nut
▶ Rubber washer (For spare nut)
▶ If needed

3

Installation & Trial operation

3 Fix the bracket onto the toilet first.
▶ Top mount metal bolt
▶ Washer
▶ Bracket holder
▶ Catch plate
▶ Top mount rubber nut
▶ Align
▶ Adjust the seat and the front part of toilet back and forth so that they can correspond with before fastening the nuts.

4 Push the main body toward the bracket completely.
▶ Push it in until it sounds 'click'
▶ When the product is not installed well, it may cause seat apart.

5 After installing the T-valve, connect the bidet-use hose to the bidet body and turn on the water.
▶ Toilet hose
▶ T-valve
▶ Bidet hose

6 Be sure of no leakage around the hose connection.
▶ Check for leaks around the hose connection.

7 Remove the adhesive protection to attach the remote control bracket to the wall or other surface.
▶ Clean the area thoroughly before attaching the bracket.

8 Insert two "AA" type batteries (included) as indicated inside battery compartment.
▶ Identify a location in the bathroom for the remote control that is visible and reachable from the toilet.

9 Insert the deodorizing cartridge into the bidet body. (DIB-J450R only)
▶ Deodorizing cartridge

10 Be sure that the nozzle comes out and retracts when powered on.
▶ Don't plug the power cord with wet hands.
▶ Risk of electric shock.

4

How to Use

1 Sit on the toilet seat
▶ Be sure to sit on the seat sensor.
▶ If the sensor is not occupied, all functions will not operate.
▶ Deodorization starts automatically. (DIB-J450R feature only)

2 Wash, Bidet, Intensive
▶ Selected function can be used as described.
▶ When pressing the selected function again, nozzle will move back and forth to wash a wider range.
▶ Press the button once again to stop Massage function.
▶ di's specialized water spray in Intensive function helps relieve constipation and fecal stasis.

3 Dry Temperature Control (DIB-J430R/J450R feature only.)
▶ Dryer operates for 3 minutes.
▶ Dryer temperature is adjustable by pressing power ctrl buttons. (5 levels)
▶ Dryer effect will be improved if you wipe the moisture lightly before operating the drying function.

4 Pulse
▶ When pressing the Pulse button during the operation of Wash, Bidet, and Intensive, water pressure will repeat high and low for smooth pulsating wash.
▶ Pulse function will not operate during the operation of Sitz bath.
▶ *See how to use section 5-14 for Sitz bath.

5 Nozzle Position Control
▶ Nozzle position is adjustable. (5 levels)

6 Water Pressure Control
▶ Water pressure is adjustable. (5 levels)
▶ If the water or screen filters become blocked, it may cause low water pressure. Regularly check the screen filter.


7 Stop
▶ All operations will stop.
▶ When pressing the Stop button for 3 seconds, unit will turn off.
▶ Press Stop, Wash, Bidet or Intensive to turn on.
▶ When pressing the Stop button on the side control panel for 5 seconds consecutively, the unit will be turned off and on automatically and initialized. All presets will be deleted.

8 Child Function
▶ When selecting Child function, settings* will be adjusted for children.
▶ 1 min Bidet - 30 sec Bidet Oscillating - 30 sec Bidet Pulse - 2 min Dry work consecutively.
▶ *Settings
Extra extended nozzle position
Lower water pressure
Lower seat temperature
Lower water temperature

5

9 Seat / Water Temperature Control

- ▶ Seat / Water temperature is adjustable. (4 levels)
(Off – Low – Middle – High)
- ▶ To reduce the chance of low temperature burns, the seat has a seat heater auto adjustment function which turns to low temperature (35°C, 95°F) when seat is occupied for more than 15 minutes consecutively. If the seat is set lower than middle level, the seat remain at off or low level.

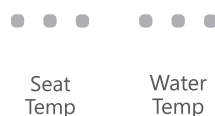


10 Energy Saving Fuction

- ▶ Automatic energy saving mode
- This mode will be activated by pressing the Energy Saving button until yellow LED lamp lights on. (Seat and water temperature will be kept at 32°C)
- ▶ Powerful energy saving mode
- This mode will be activated by pressing the Energy Saving button until green LED lamp lights on. (Seat and water heater will be kept off)
- ▶ Release of energy saving mode
- Press the Energy Saving button until LED lamp turns off.
- ▶ When the unit is occupied, it adjusts to the preset temperature and it returns to the saving mode when seat is unoccupied.
- ▶ If the seat and water temperature are off, they will remain off.

11 Nozzle Cleaning

- ▶ When selecting Nozzle Cleaning while not seated, the nozzle cleans itself 3 times. Then nozzle extends and stop for manual cleaning process.
- ▶ Clean the nozzle with a brush and press STOP button after completion of manual cleaning. Then nozzle cleans itself for 3 times and retracts.
- ▶ NOZZLE CLEANING will not operate if the seat sensor is activated.

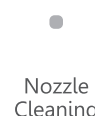

12 Deodorization (DIB-J450R feature only)

- ▶ When sitting on the seat, deodorizing function starts automatically.
- ▶ After leaving the seat, the deodorizing function operates for 1 additional minute.
- ▶ Automatic start deodorizing function can be cancelled/set by pressing Stop and Energy saving buttons for 3 seconds while not seated.

More than 3 Seconds



13 Automatic tank draining

- ▶ To protect water contamination, the water tank will be drained(replaced) for 2 minutes if the seat is not used for 48 consecutive hours.
- ▶ This feature is deactivated from the factory. To activate this feature, press Stop and Water Temp. buttons for 3 seconds.

More than 3 Seconds



14 Sitz Bath

- ▶ Wash or Bidet is switched to Wash Sitz Bath or Bidet Sitz Bath if Nozzle Cleaning button is selected during Wash or Bidet operation.
- ▶ Water pressure is switched to 1st level regardless preset water pressure setting and Sitz Bath operates for 5 minutes.
- ▶ LED of Nozzle Cleaning turns on during the operation of Sitz Bath.
- ▶ Select the Nozzle Cleaning again to switch to normal Wash or Bidet.



15 Seat Sensor Release


- ▶ The seat sensor can be activated and deactivated by pressing Pulse button for 3 seconds.
- ▶ If the seat sensor is deactivated, the unit works without occupying the seat and features* cannot be controlled.

* Features
Night light, Silent mode, Nozzle cleaning.

Pulse

16 Night Light

- ▶ Blue LED night light provides enough brightness to see the toilet without turning on the bathroom light.
- ▶ Night light can be turned on and off by pressing "+ " for 3 seconds while not seated.
- ▶ Night light setting cannot be adjusted if seat sensor release feature is activated.

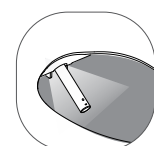


More than 3 Seconds

How to Use

6


Screen Filter Cleaning

- 1 Close the water valve.
- 2 Disconnect the water supply hose. Take the screen filter out and clean it with a soft brush.
- 3 Return the filter after cleaning and reconnect the water supply hose.
- 4 Open the water valve.

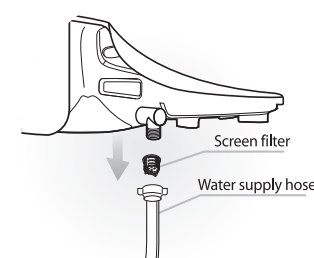


Maintenance during Winter Season

When bidet seat is not used for an extended period of time, unplug and drain the unit.

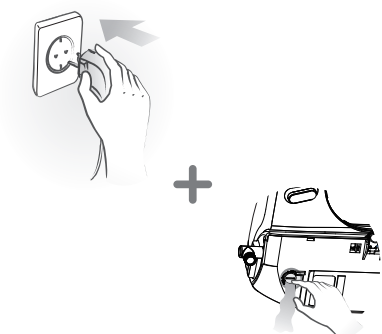


Cleaning of Unit Body

- 1 Exterior surface of unit is made of plastic material, which may be damaged by scrubber, chemicals, etc.
- 2 Wipe the surface with a soft damp cloth. Do not spray water directly onto the surface.
- 3 Clean the body after removing the power plug from the outlet. Be sure no water splashes into the power plug or outlet.
- 4 Be careful of not dropping any chemical detergents or toilet cleaner on the water supply hose. Risk of the hose damage.

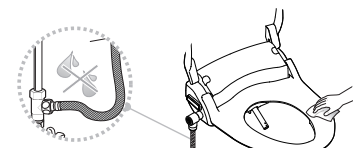

Draining of Remaining Water

- 1 Remove the power plug from the outlet.
- 2 Close the water feed valve.
- 3 Press the lever plate and gently pull to remove the unit from the catch plate.
- 4 Use a coin to open the drain plug.

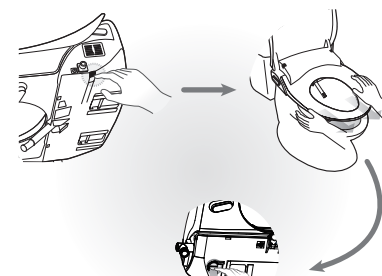

Maintenance & Cleaning

7

7-1. User setting with the remote control

● : Seat sensor 'off' status ○ : Seat sensor 'on' status ◎ : Regardless of on/off

No	Function	Seat status	Switch operation	Description	Initial status
1	Silent mode	●	" - " for longer than 3 seconds.	To turn on/off the operating chime sound.	ON
2	Seat sensor release	●	" Pulse " for longer than 3 seconds.	Seat sensor feature will be deactivated.	OFF
3	Automatic start deodorizing	◎	" Energy Saving " for longer than 3 seconds.	Automatic deodorizing start feature will be deactivated.	ON
4	Night light	●	" + " for longer than 3 seconds.	To on/off the night light.	ON
5	Automatic tank draining	●	" ■ " + " Water Temp " for longer than 3 seconds	Automatic tank draining feature will be deactivated.	OFF

7-2. User setting with the side control (auxiliary panel)

1	Factory default setting	●	" ■ " for longer than 5 seconds.	Press one of Stop, Wash or Bidet to power on.	
2	Sleep mode	●	" ■ " for longer than 3 seconds.	The unit will be in sleep mode. Press any of " ⏏ ", " ⏏ ", " ⏏ " and " ⏏ " turn on.	OFF

* The unit will work without sitting on the seat if the occupied seat sensor is deactivated. (turned off)
* If the seat sensor is deactivated, some features cannot be controlled. (Night light on/off, silent mode on/off and nozzle cleaning)
* Above features are deactivated with 1 buzzer sound and activated with 2 buzzer sounds.


Settings

7

7-3. Remote ID setting

- ID setting is required to protect remote signal interruption if more than one bidet seats are installed at one place (public toilets)

1. Press Nozzle Control "▼" for 3 seconds. The indicator of "Nozzle Cleaning" blinks and the unit is ready for ID setting.
2. Set the ID by pressing Power Control "+" or "-" (1~5 IDs available)
3. Press "Stop" to save the ID. The main unit will be synchronized simultaneously.

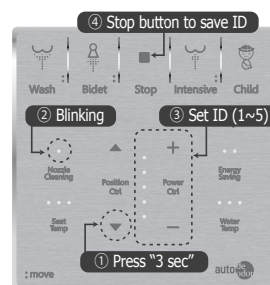

* The remote should be located near by the main unit when ID is set.
* Default ID of remote is "0"
* In case of battery replacement, power resetting of main unit or factory initialization, ID will be initialized, "0", and setting process should be done again.

Troubleshooting

8

※ Please check the following points before requesting the repair service.


Problem	Check list
Completely out of order	• Check if the power plug is not connected. • Check if the power supply or outlet is failed.
Water does not spray out	• Check if the water supply is turned on. • Check if water valve is locked. • Check if nozzle is blocked by foreign material. • Check if connection hose is bent.
Water pressure is low	• Check if screen filter is blocked by foreign material. • Check if the water pressure is set at too low level.
Water is not warm enough	• Check if its temperature is set at off or low level, or economy mode.
Seat is not warm enough	• Check if its temperature is set at off or low level, or economy mode.
Water tank is drained intermittently	• Check if the automatic water draining feature activates.

Features

9

	Features	N-1000
Wash / Dry features	Wash	●
	Bidet	●
	Intensive	●
	Child	●
	Dry	●
Convenient / Comfortable features	Normal / Powerful energy saving	●
	Oscillating / Pulsating	●
	Continuous heated water	●
	Heated seat	●
	Soft closing	●
	One touch release	●
	Automatic deodorizing	●
	Nozzle cleaning	●
	Seat sensor release	●
	Night Light	●
Satety features	Remote control	●
	Low burn protection	●

■ Dimensions inch(mm)

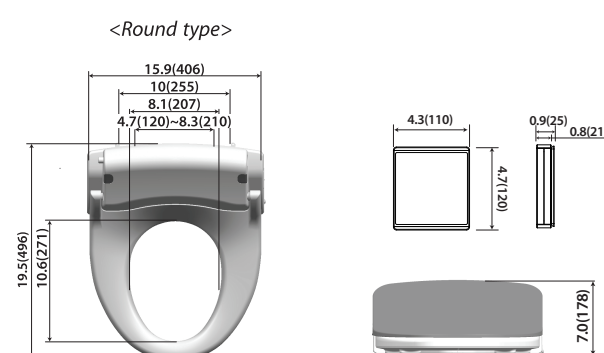

Specifications

10

Item			N-1000
Rated voltage			AC 220 ~ 240V, 50Hz ~
Max. Power consumption			870W
Power cord length			1.8m
Water feed method			Directly connected to water pipe
Recommended water inlet pressure			0.7 ~ 7.5MPa
Wash	Feed Volume	Wash	0.5~0.8 ℓ/min
		Bidet	0.5~0.7 ℓ/min
		Intensive	0.5~0.7 ℓ/min
		Child	0.5~0.6 ℓ/min
	Pressure control		5 levels
	Temperature control		4 levels (off-low-middle-high)
	Heater capacity		800W
	Safety device		Water level sensor, Thermal fuse, Bi-metal, Temperature sensor
Heated seat	Temperature control		4 levels (off-low-middle-high)
	Heater capacity		55W
	Safety device		Thermal fuse
Dry	Temperature control		Room temp. ~ 40℃
	Heater capacity		250W
	Safety device		Thermal fuse, Bi-metal
Deodorization			Catalytic deodorization
Feed water temp. tolerance range			3 ~ 35℃ (recommended 12 ~ 35℃)
Usage room temp. tolerance range			3 ~ 40℃ (recommended 10 ~ 35℃)
Dimension	-		-
	Round		18.5"(470) x 19.5"(496) x 7.0"(178)
Weight	-		-
Net weight (Gross weight)	Round		4.9kg (7.2kg)

2 YEAR WARRANTY PARTS & LABOUR

1. We hereby warrant that the Product will be free from manufacturing defects which affect the ability of the Product to operate for its intended use.
2. In case of failure immediately cease using the Product. Go to nationalbidet.com.au and view the troubleshooting guide, if this does not solve the problem contact customer support.
3. Warranty is for product only and does not include deinstallation/installation or shipping.
4. For comprehensive warranty information go to nationalbidet.com.au

Please complete form for your own records

Product Name	
Model Name	
Date Purchased	
SER.No.	
Customer's Address	Name
	Tel.No
Distributor's Address	Name
	Tel.No

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Please choose carefully we do not normally give refunds if you simply change your mind or you have measured incorrectly or for health reasons if the bidet has been used.

We will refund, exchange or credit if the goods are faulty and cannot be repaired.

Please retain your invoice for the period of your warranty.
Any returns may incur up to 20% restocking fee and/or shipping costs.

See Consumer Laws in relation to change of mind
(AUST) www.consumerlaw.gov.au (NZ) www.consumerprotection.govt.nz
In case of product failure

AUSTRALIA: 1201/56 Scarborough St, Southport, QLD 4215
New Zealand: Unit 5/31 Princes St, Onehunga 1061
AUS PH: 02 9137 6103 NZ PH: 09 281 5056
National | www.nationalbidet.com.au